

[Download Center](#)

Intel® Server Board
S5000PAL

[Additional Downloads](#)
[Support Information](#)

[RSS Feed](#)

Select a language for
Download Center

English

Downloads

Download Assistance

- To begin the download process, click Download.
- For additional details about this download, click Read Me or Release Notes (not available for all downloads).

SR2500 Hot Swap Controller Firmware v2.05 [SR2500_HSC205.ZIP]

Intel® server chassis SR2500 Hot Swap Controller Firmware v2.05 update for use with bootable DOS media.

Note: Use the provided update batch file and firmware update utility. Updating using your own utility or switches is unsupported, and may leave your HSC in a non-functional state.

Firmware Installation Procedure (Requires HSC firmware already running):

1) Unzip the release package, and copy the contents onto DOS bootable media (such as a bootable USB memory device).

2) Boot to DOS, and change directories to the release directory.

3) Run the provided run.bat file.

4) The HSC will receive a boot code update. This could take up to 13 minutes to upload and verify.

5) After verification, the firmware requires 60 seconds to finish updating. The front-panel power and reset buttons will be placed in secure mode during this time. Any attempts to access these buttons will result in security violation entries in the system event log.

DO NOT reset or remove power from the system during this time as any interruption could leave the HSC inoperable.

6) Update your BMC's SDR package to the latest version.

7) Reboot your system.

Please see the readme file for additional details and update requirements.

[Read Me](#) (txt)

English: SR2500_HSC205.zip

Ver:2.05

Date:12/31/2006

Size:230 (KB)

Time @56Kbps:0.53 min

OS:DOS, OS Independent

[Download](#)

This download is also valid for the products listed below. Use the links below for additional product downloads:

[Intel® Server Board S5000PAL](#)
[Intel® Server Board S5000XAL](#)
[Intel® Server Chassis SR2500](#)