


Intel® SC5100 Pedestal and Rack Server Chassis Subassembly Product Guide

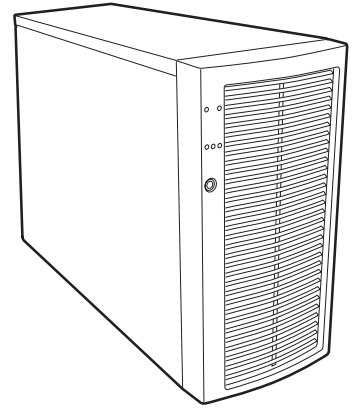

A Guide for Technically Qualified Assemblers of Intel® Identified Subassemblies/Products

Order Number: A55454-003

<http://support.intel.com/support/motherboards/server/chassis/sc5100>

Disclaimer:

Information in this document is provided in connection with Intel® products. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document. Except as provided in Intel's Terms and Conditions of Sale for such products, Intel assumes no liability whatsoever, and Intel disclaims any express or implied warranty, relating to sale and/or use of Intel products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. Intel products are not designed, intended or authorized for use in any medical, life saving, or life sustaining applications or for any other application in which the failure of the Intel product could create a situation where personal injury or death may occur. Intel may make changes to specifications and product descriptions at any time, without notice.

Intel is a registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

† Other names and brands may be claimed as the property of others.

Copyright © Intel Corporation 1999 - 2002. All rights reserved.

Contents

1 Chassis Description

| | |
|--|----|
| Kit Contents..... | 7 |
| Additions for the SC5100 Pedestal Chassis..... | 7 |
| Additions for the SC5100 Rack Chassis | 7 |
| Feature Summary | 8 |
| Chassis Front View..... | 9 |
| Front Panel Controls and Indicators..... | 10 |
| Chassis Rear View | 11 |
| SC5100 Chassis Side View | 12 |
| Peripherals | 13 |
| 5.25-inch Removable Media Drive Bays | 13 |
| 5.25-inch Hard Drive Bays..... | 13 |
| Optional 3.5-inch Hot Swap Drive Bay..... | 13 |
| Power Supply | 13 |
| Checking the Power Cords | 14 |
| Chassis Security..... | 14 |
| Monitoring..... | 14 |
| Mechanical Locks | 15 |

2 Setting Up the Chassis

| | |
|---|----|
| Tools and Supplies Needed | 17 |
| Installation Safety Instructions..... | 17 |
| Safety: Before You Remove the Access Cover..... | 17 |
| Warnings and Cautions | 18 |
| Install the Front Door Grill – Pedestal-mounted (tower) Server Only | 19 |
| Remove the Access Cover..... | 20 |
| Install the I/O Shield | 21 |
| Install the Server Board Bumpers..... | 22 |
| Install the Server Board..... | 22 |
| Connect Cables to the Server Board | 23 |
| Install the Diskette Drive..... | 24 |
| Hard Drives | 27 |
| Drive Cabling Considerations | 27 |
| Installing a 5.25-inch Removable Media Device..... | 28 |
| Installing a 5.25-inch or 3.5-inch Hard Drive | 31 |
| Hot Swap SCSI Hard Disk Drives | 34 |
| Installing an Add-in Board | 36 |
| Install the Upper Foam Epac | 38 |
| Install the Access Cover..... | 38 |
| Install the Chassis Feet (Pedestal Mode) | 39 |
| Install into a Rack (Rack Mode)..... | 40 |

| | | |
|----------|--|----|
| 3 | Maintaining Your Server | |
| | Tools and Supplies Needed | 43 |
| | Safety: Before You Remove the Access Cover | 43 |
| | Warnings and Cautions | 43 |
| | Replacing Fans | 44 |
| | Replacing a Front System Fan | 44 |
| | Replacing a Rear System Fan | 44 |
| | Replacing a Power Supply | 45 |
| | 350 or 650 Watt Hot Swap Power Supply Modules..... | 45 |
| | 350 or 650 Watt AC Power Supply Housing | 46 |
| | 300 or 550 Watt Power Supply | 48 |
| | Replacing the Front Panel Board..... | 49 |
| | Replacing the Hot Swap Backplane and SAF-TE Card | 50 |
| 4 | Technical Reference | |
| | Power Supply Specifications | 55 |
| | Input Voltages..... | 55 |
| | Output Voltages..... | 55 |
| | Environmental Specifications | 57 |
| 5 | Regulatory Information | |
| | Regulatory Compliance | 59 |
| | Safety Compliance..... | 59 |
| | EMC Compliance..... | 59 |
| | Regulatory Compliance Markings | 60 |
| | Electromagnetic Compatibility Notices..... | 60 |
| | FCC Verification Statement (USA)..... | 60 |
| | ICES-003 (Canada) | 61 |
| | Europe (CE Declaration of Conformity)..... | 61 |
| | VCCI (Japan)..... | 61 |
| | BSMI (Taiwan)..... | 62 |
| | Lithium Battery Replacement | 62 |
| | Equipment Rack Precautions | 63 |
| | Use Only for Intended Applications..... | 64 |
| A | Equipment Log and Worksheets | |
| | Equipment Log | 65 |
| | Current Usage..... | 67 |
| | Calculating Power Usage..... | 67 |
| B | Warnings | |
| | WARNING: English (US)..... | 70 |
| | AVERTISSEMENT: Français..... | 72 |
| | WARNUNG: Deutsch | 74 |
| | AVVERTENZA: Italiano..... | 76 |
| | ADVERTENCIAS: Español..... | 78 |

C Warranty

| | |
|---|----|
| Limited Warranty for Intel® Chassis Subassembly Products..... | 81 |
| Extent of Limited Warranty..... | 81 |
| Warranty Limitations and Exclusions..... | 82 |
| Limitations of Liability..... | 82 |
| How to Obtain Warranty Service..... | 83 |
| Telephone Support..... | 83 |
| Returning a Defective Product..... | 84 |

Figures

| | |
|---|----|
| 1. Screw Description..... | 7 |
| 2. Front View..... | 9 |
| 3. Pedestal Controls and Indicators..... | 10 |
| 4. Rack Controls and Indicators..... | 10 |
| 5. Rear View..... | 11 |
| 6. SC5100 Chassis Side View..... | 12 |
| 7. Mechanical Locks..... | 15 |
| 8. Installing the Front Door Grill..... | 19 |
| 9. Removing the Access Cover..... | 20 |
| 10. Installing the I/O Shield..... | 21 |
| 11. Removing the Diskette Drive Carrier..... | 24 |
| 12. Installing the Diskette Drive into the Drive Carrier..... | 25 |
| 13. Installing the Diskette Drive/Carrier Assembly..... | 26 |
| 14. Removing EMI Shields..... | 28 |
| 15. Slide Rails..... | 29 |
| 16. Installing a Removable Media Device..... | 30 |
| 17. Removing a Drive Carrier..... | 31 |
| 18. Attaching a Hard Drive to a Carrier..... | 32 |
| 19. Installing a Carrier..... | 33 |
| 20. Removing the Air Baffle from the Drive Carrier..... | 34 |
| 21. SCA Hard Disk Drive and Hot Swap Drive Carrier..... | 35 |
| 22. Inserting a Hot Swap Drive..... | 36 |
| 23. Installing an Add-in Board..... | 37 |
| 24. Installing the Access Cover..... | 38 |
| 25. Installing the Chassis Feet..... | 39 |
| 26. Attaching the Rail to the Chassis..... | 40 |
| 27. Rails Installed in a Rack..... | 41 |
| 28. Installing the Server into a Rack..... | 42 |
| 29. Hot Swapping a Power Supply..... | 45 |
| 30. Replacing the 350 or 650 Watt AC Power Supply Module..... | 46 |
| 31. Replacing the 300 Watt AC Power Supply..... | 48 |
| 32. Replacing the Front Panel Board..... | 49 |
| 33. Removing the Hot Swap Drive Carriers..... | 50 |
| 34. Removing the Hot Swap Drive Bay..... | 51 |

| | | |
|-----|--|----|
| 35. | Removing the Hot Swap Backplane | 52 |
| 36. | Replacing the Hot Swap Backplane..... | 53 |
| 37. | SAF-TE Card and Hot Swap Backplane | 54 |


Tables

| | | |
|----|---|----|
| 1. | Feature Summary..... | 8 |
| 2. | LED Description..... | 10 |
| 3. | Power Supply System Output Capability | 55 |
| 4. | Power Supply System Output Capability | 56 |
| 5. | Power Supply System Output Capability | 56 |
| 6. | Power Supply System Output Capability | 57 |
| 7. | Environmental Specifications..... | 57 |
| 8. | Power Usage Worksheet 1 | 67 |
| 9. | Power Usage Worksheet 2 | 68 |

1 Chassis Description

Kit Contents

The chassis subassembly kit includes this Product Guide; one or two power cords (depending on the power supply); and a box that includes six 5.25-inch external drive rails and four different types of mounting screw.

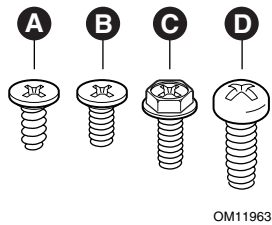

- | | |
|--------------------------------|-------------------------------|
| A. Flat head 6-32 x 5mm [.200] | C. Hex head 6-32 x 6mm [.256] |
| B. Flat head M3 x 5mm [.200] | D. Round head M4 x 8mm [.315] |

Figure 1. Screw Description

Additions for the SC5100 Pedestal Chassis

In addition, this kit includes two chassis feet.

Additions for the SC5100 Rack Chassis


In addition, this kit includes two rail assemblies.

Feature Summary

Table 1. Feature Summary

| Feature | Description |
|-----------------------|---|
| Drive Bays | <p>One 3.5-inch diskette drive bay, accessible from front.</p> <p>Two 5.25-inch wide bays that are externally accessible, designed to hold half-height standard removable media devices; two of the bays can be converted into a single full-height bay.</p> <p>Five (two with the optional hot swap bay) 5.25-inch wide bays that are not externally accessible, designed to hold half-height IDE drives.</p> <p>An optional hot swap bay for 3.5-inch hard disk drives: space for up to five 1-inch high, SCA2 hard drives.</p> |
| Expansion slot covers | <p>Up to seven expansion slots can be used; every slot that does not have an add-in board installed must have a slot cover installed.</p> |
| Power supply | <p>One of the following:</p> <ul style="list-style-type: none">• 300 watt power factor correction (PFC) power supply.• 350 watt hot swap redundant 1+1 PFC power supply.• 550 watt PFC power supply.• 650 watt hot swap redundant 2+1 PFC power supply. |
| Cooling | <p>Four system fans inside the chassis and one power supply fan (300 and 550 watt power supplies) provide cooling and airflow. The 350 and 650 watt power supplies have two fans.</p> |

Chassis Front View

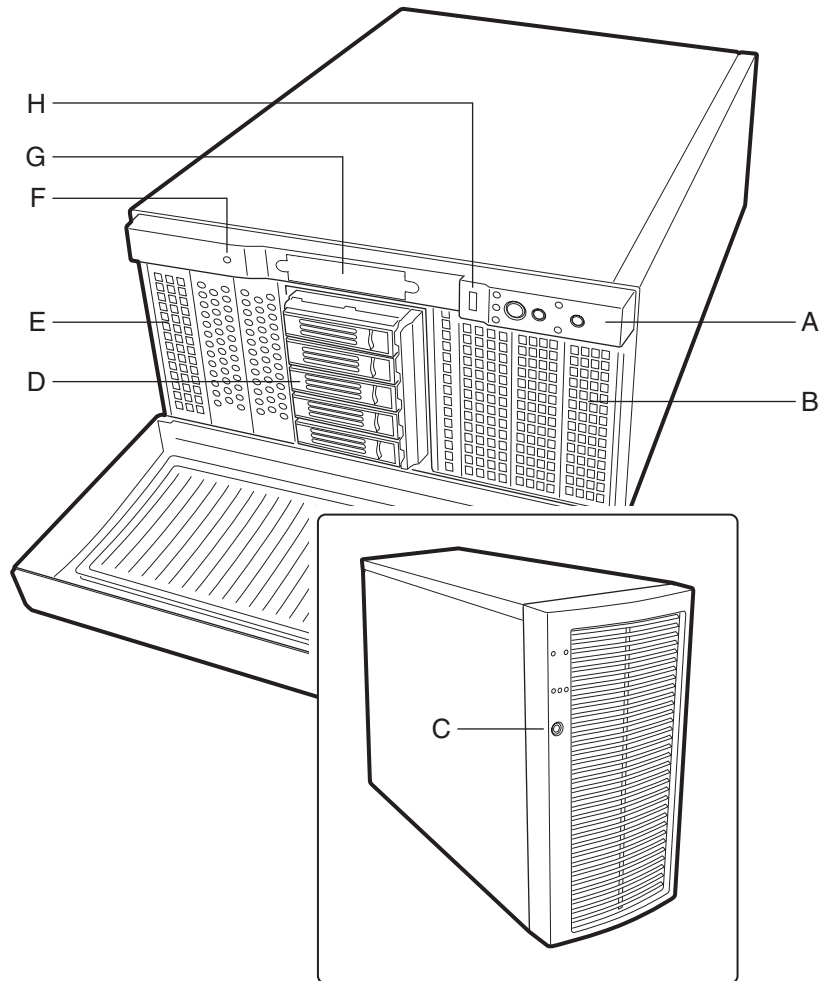


OM11926

- A. Front panel controls and indicators
- B. 5.25-inch removable media drive bays
- C. Security lock
- D. Hot swap drive carriers*
- E. Internal drive bays
- F. Chassis intrusion switch*
- G. Diskette drive bay location
- H. USB port

* Items shown may not be included in the chassis.

Figure 2. Front View


Front Panel Controls and Indicators

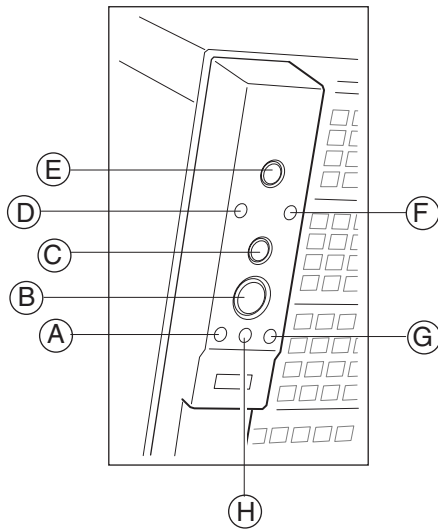

OM11954

- A. Hard drive activity LED
- B. Power button
- C. Sleep button
- D. LAN #1 activity LED
- E. Reset button
- F. LAN #2 activity LED
- G. Status LED
- H. Power/Sleep LED

Figure 3. Pedestal Controls and Indicators

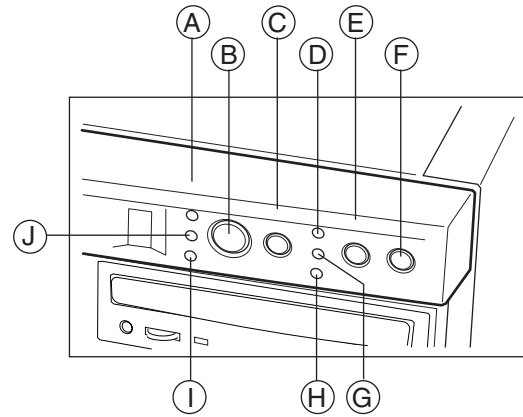

OM12035

- A. Hard drive activity LED
- B. Power button
- C. Sleep button
- D. LAN #1 activity LED
- E. Reset button
- F. ID button
- G. ID LED
- H. LAN #2 activity LED
- I. Status LED
- J. Power/ Sleep LED

Figure 4. Rack Controls and Indicators

Table 2. LED Description


| LED Name | Color | Condition | Description |
|---------------------|-------|-----------|---------------------|
| Hard drive activity | Green | BLINK | Hard drive activity |
| | Amber | ON | Fault |
| | | OFF | No activity |
| LAN#1 activity | Green | ON | Linked |
| | Green | BLINK | LAN activity |
| | | OFF | Disconnected |
| LAN#2 Link/Act | Green | ON | Linked |
| | Green | BLINK | LAN activity |
| | | - | OFF |

continued

Table 2. LED Description (continued)

| LED Name | Color | Condition | Description |
|-----------------|-------|-----------|---|
| Status LED | Green | ON | System ready |
| | Green | BLINK | Processor or memory disabled |
| | Amber | ON | Temperature or voltage critical fault; CPU/Terminator missing |
| | Amber | BLINK | Power fault; Fan fault; Temperature or voltage non-critical fault |
| | | OFF | Fatal error during POST |
| Power/Sleep LED | Green | ON | Power on |
| | Amber | ON | Sleep (S1) |
| | | OFF | Power off or Sleep (S4) |
| ID LED | Blue | On | Server identification; Toggled by ID button or software |
| | | OFF | Server identification; Toggled by ID button or software |

Chassis Rear View

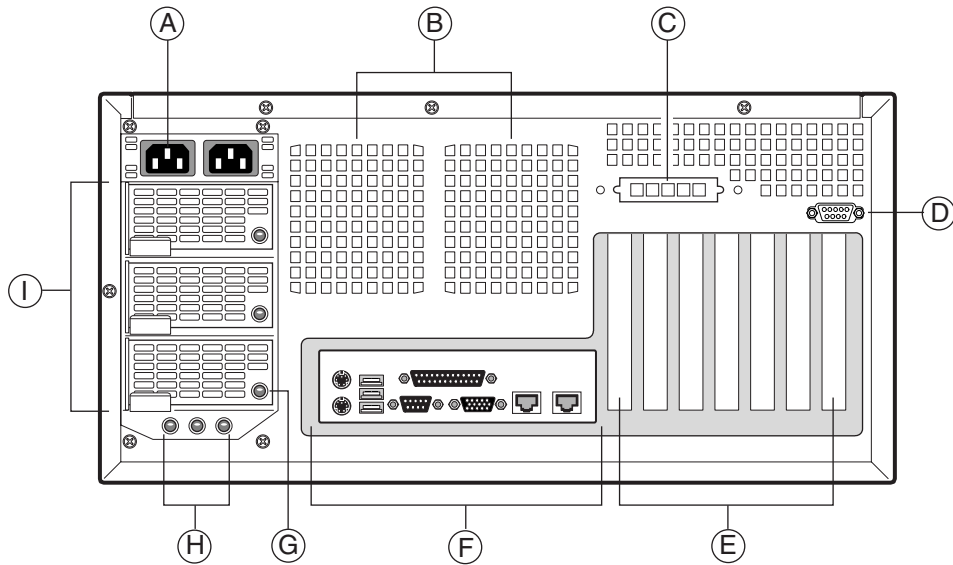


OM11920

- A. AC input power connectors
- B. Fans
- C. ICMB/external SCSI knockout
- D. Optional serial port*
- E. Expansion slot covers
- F. I/O ports*
- G. Power supply failure LED
(Green LED means proper operation)*
- H. AC module Power Good LEDs
(AC1, AC2, ACR; lit means proper operation)*
- I. Power supplies*

* Items shown may differ in your chassis.

Figure 5. Rear View

SC5100 Chassis Side View

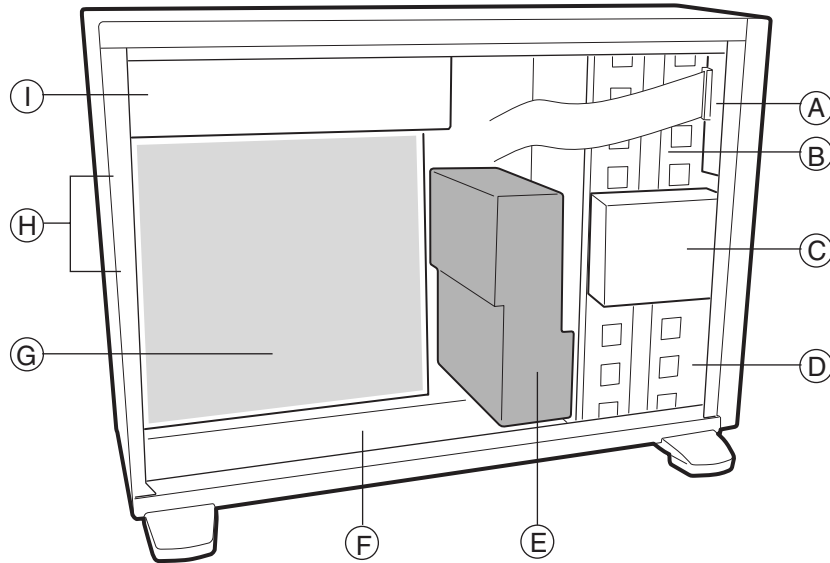

OM12297

- A. Front panel
- B. 5.25-inch removable media drive bays
- C. Diskette drive*
- D. 5.25-inch hard drive bays
- E. Foam epac fan carrier*
- F. Main chassis
- G. Server board*
- H. System fans
- I. Power supply

* Items shown may differ in your chassis.

Figure 6. SC5100 Chassis Side View

Peripherals

5.25-inch Removable Media Drive Bays

The upper bays are designed for removable media peripherals. You can install up to two half-height peripherals or one full height peripheral. For proper cooling, the lowest position must remain open.

5.25-inch Hard Drive Bays

The lower five (two with the optional hot swap bay installed) drive bays are designed for hard drives.

Optional 3.5-inch Hot Swap Drive Bay

The hot swap drive bay supports up to five 3.5-inch SCA LVDS hard drives. Five carriers are included with the system. If no drive is installed in a carrier, a plastic air baffle must be installed to ensure proper hard drive cooling.

The hot swap drive bay accepts 1-inch peripherals that consume up to 18 Watts of power. Drives must be specified to operate at a maximum ambient temperature of 50 °C.

Power Supply

All power supplies are auto ranging for either 100-120 VAC or 200-240 VAC. The chassis comes with one of four power supply options.

- a 300 watt, single line cord, non-redundant power supply
- a 350 watt, dual line cord, 1+1 redundant power supply
- a 550 watt, single line cord, non-redundant power supply
- a 650 watt, dual line cord, 2+1 redundant power supply

Checking the Power Cords

WARNING

Do not attempt to modify or use a supplied AC power cords if they are not the exact type required.

The power supply cords are the main disconnect device to mains (AC power). The socket outlet shall be installed near the equipment and shall be readily accessible.

If a power cord supplied with the chassis is not compatible with the AC wall outlet in your region, get one that meets the following criteria:

- The cord must be rated for the available AC voltage and have a current rating that is at least 125% of the current rating of the server.
- The connector that plugs into the wall outlet must be a grounding-type male plug designed for use in your region. It must have certification marks showing certification by an agency acceptable in your region.
- The connector that plugs into the AC receptacle on the power supply must be an IEC 320, sheet C13, type female connector.
- In Europe, the cord must be less than 4.5 meters (14.76 feet) long, and it must be flexible <HAR> (harmonized) or VDE certified cordage to comply with the chassis' safety certifications.

Chassis Security


To help prevent unauthorized entry or use of the server, the chassis includes two chassis intrusion switches that can be monitored by Server Management software, a padlock loop at the rear of the chassis, and a front bezel door lock (pedestal only).

Monitoring

Two chassis intrusion switches are preinstalled. When the access cover is removed or the front bezel door is opened, the switch transmits a signal to the BMC on the server board. Server management software can be programmed to respond to an intrusion by powering down or by locking the keyboard, for example.

Mechanical Locks

A user installed padlock loop (provided in the hardware kit) on the rear of the chassis access cover can be used to prevent access to the internal of the chassis. A variety of lock sizes can be accommodated by the .270 diameter loop. The front bezel has a two position lock to prevent access to the hard drives and the interior of the chassis.

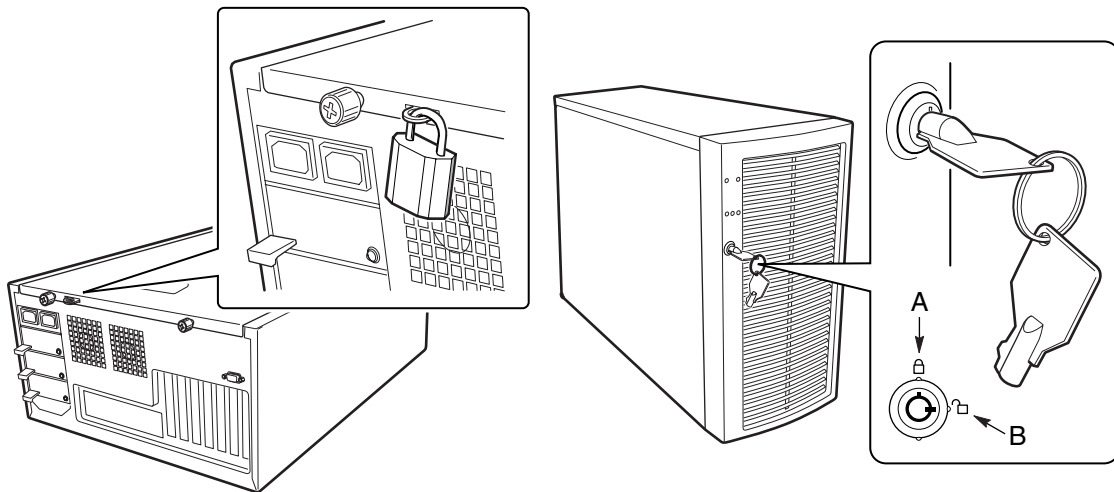

OM11955

- A. Front bezel locked
- B. Front bezel unlocked

Figure 7. Mechanical Locks

2 Setting Up the Chassis

This chapter describes how to set your server up for the first time.

Tools and Supplies Needed

- Phillips[†] (cross head) screwdriver (#2 bit)
- Antistatic wrist strap (recommended)

Installation Safety Instructions

Only technically qualified personnel should integrate this assembly.

Follow these guidelines to meet and maintain safety and product regulatory requirements when integrating this chassis subassembly.

Read and adhere to all of these instructions and the instructions supplied with this assembly. If you do not follow these instructions, the UL listing will be void, and the product will most likely be non-compliant with other regional product laws and regulations.

Safety: Before You Remove the Access Cover

Before removing the access cover for any reason, observe these safety guidelines:

1. Turn off all peripheral devices connected to the server.
2. Turn off the server by pressing the power button on the front of the chassis. Then unplug the AC power cord from the chassis or wall outlet.
3. Label and disconnect all peripheral cables and all telecommunication lines connected to I/O connectors or ports on the back of the chassis.
4. Provide some electrostatic discharge (ESD) protection by wearing an antistatic wrist strap attached to chassis ground—any unpainted metal surface—when handling components.

Warnings and Cautions

These warnings and cautions apply whenever you remove the access cover to access components inside the server. Only a technically qualified person should integrate and configure the server.



WARNINGS

The power button on the front panel DOES NOT turn off the AC power. To remove power from server, you must unplug the AC power cord from the wall outlet or the chassis.

Hazardous electrical conditions may be present on power, telephone, and communication cables. Turn off the server and disconnect the power cords, telecommunications systems, networks, and modems attached to the server before opening it. Otherwise, personal injury or equipment damage can result.

Hazardous voltage, current, and energy levels are present inside the power supply. There are no user-serviceable parts inside it; servicing should be done by technically qualified personnel.



CAUTIONS


ESD can damage disk drives, boards, and other parts. Perform all procedures in this chapter only at an ESD workstation. If one is not available, provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground—any unpainted metal surface—on your server when handling parts.

Always handle boards carefully. They can be extremely sensitive to ESD. Hold boards only by their edges. Do not touch the connector contacts. After removing a board from its protective wrapper or from the server, place the board component side up on a grounded, static free surface. If you place the server board on a conductive surface, the battery leads may short out. If they do, this will result in a loss of CMOS data and will drain the battery. Use a conductive foam pad if available. Do not slide board over any surface.

For proper cooling and airflow, always install the access cover before turning on the server. Operating it without the cover in place can damage system parts.

Install the Front Door Grill – Pedestal-mounted (tower) Server Only

1. Position the grill and the grill tab (A) as shown.
2. Push the grill over the tabs on the door until the grill snaps in place.

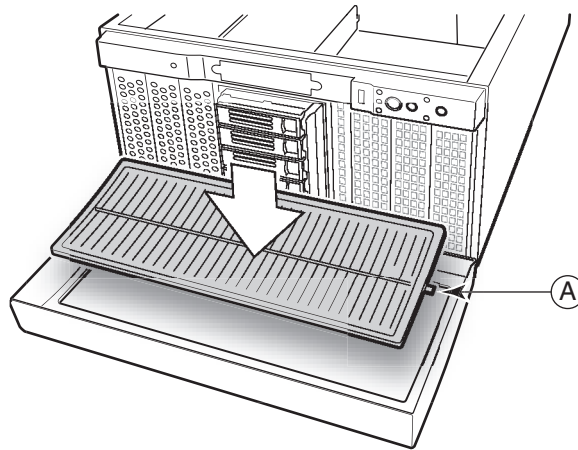

OM13917


A. Grill Tab

Figure 8. Installing the Front Door Grill

Remove the Access Cover

Facing the front of the chassis, the access cover is on the left side, for pedestal-mounted (tower) servers; or on the top, for rack-mounted servers.

1. Observe the safety and ESD precautions at the beginning of this chapter.
2. If the shipping screw is installed, remove it.
3. Loosen the captive thumbscrews that secure the access cover in place.
4. Slide the cover backward a short distance, until it stops.
5. Pull the entire cover outward, straight away from the chassis, to disengage the rows of tabs from the notches in the top and bottom edges of the chassis. Set the cover aside.

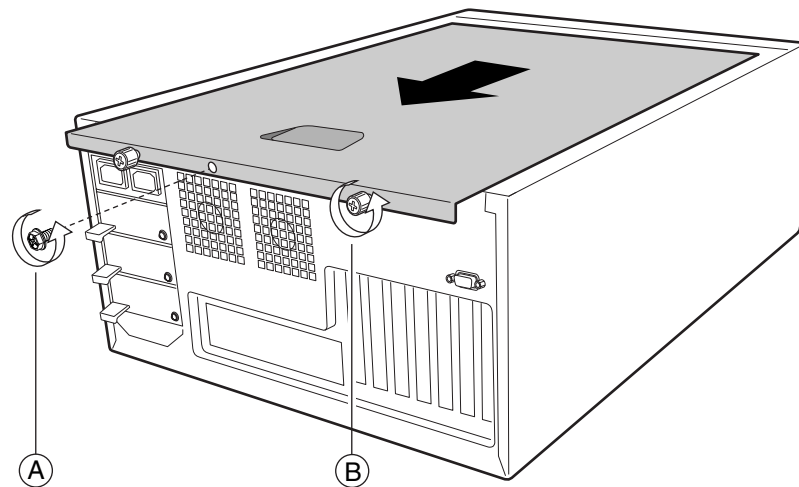

OM11929

A. Shipping screw

B. Thumbscrew

Figure 9. Removing the Access Cover


Install the I/O Shield

NOTE

An ATX 2.03-compliant I/O shield should be provided with your server board. The shield is required by Electromagnetic Interference (EMI) regulations. It minimizes EMI and ensures proper cooling of the server.

The shield fits the rectangular opening near the power supply in the back of the chassis. The shield has cutouts that match the external I/O connectors (e.g., keyboard and mouse).

1. If an EMI gasket was provided with your server board, install the EMI gasket on the I/O shield.
2. Install the shield from inside the chassis. Orient the shield so that the cutouts align with the corresponding I/O connectors on the server board.
3. Position one edge so that the dotted groove is outside the chassis wall and the lip of the shield rests on the inner chassis wall.
4. Hold the shield in place, and push it into the opening until it is seated. Make sure the I/O shield snaps into place all the way around.

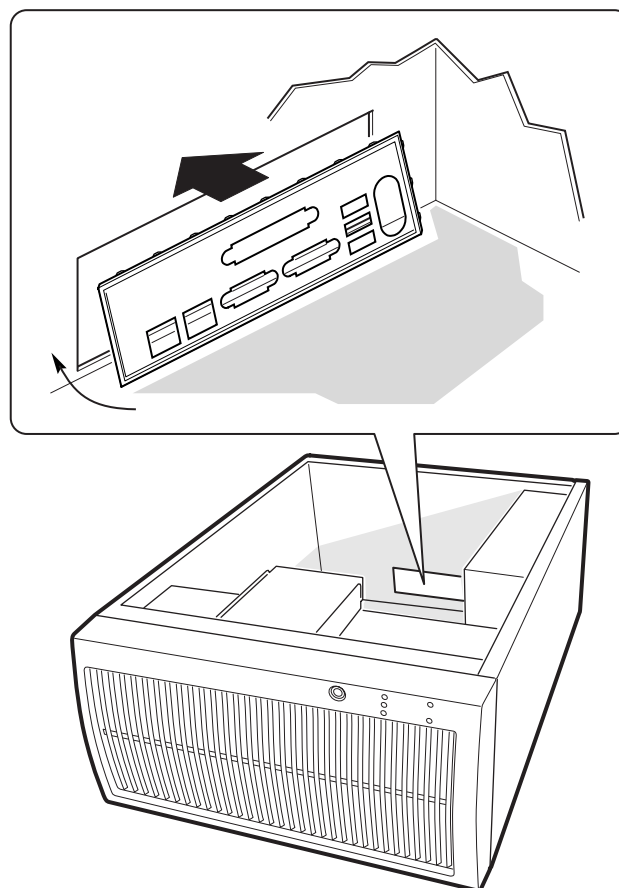

OM11956

Figure 10. Installing the I/O Shield

Install the Server Board Bumpers

Please see the quick start guide that shipped with your board for the proper diagram. Peel the adhesive backing from three rubber bumpers; stick the bumpers to the chassis wall.

Install the Server Board

See your server board quick start guide or welcome mat for more information on how to install your server board, processors, and memory.

1. Remove the top piece(s) of foam epac from the system fans.
2. Tilt the board into the chassis I/O connector end first. Make sure the I/O connectors stick out through the I/O shield.
3. Insert one screw through one of the mounting holes of the board and into a threaded standoff. Do not tighten the screw until the next step.
4. Insert the remaining screws through the mounting holes and into the threaded standoffs. Make sure the board is properly seated, and then tighten all the screws firmly, starting with the screws in the center of the board.

Connect Cables to the Server Board

See your server board product guide or quick start guide for connector locations.


1. Connect the power cables to the server board.
 - a. 300 watt power supply:
 - The large plug labeled P1 plugs to the main power connector on the server board.
 - The plug labeled P2 plugs to the AUX power connector on the server board (if available). Note that this cable may not be long enough for some server boards; it is not required for normal operation.
 - b. 350 watt power supply:
 - The large plug labeled P1 plugs to the main power connector on the server board.
 - The plug labeled P2 plugs to the AUX power connector on the server board.
 - The plug labeled P3 plugs into the AUX SIG connector on the server board (if available).
 - c. 550 watt power supply:
 - The large plug labeled P1 plugs to the main power connector on the server board.
 - The plug labeled P2 plugs to the AUX power connector on the server board (if available). Note that this cable may not be long enough for some server boards; it is not required for normal operation.
 - d. 650 watt power supply:
 - The large plug labeled P1 plugs to the main power connector on the server board.
 - The plug labeled P2 plugs to the AUX power connector on the server board.
 - The plug labeled P3 plugs into the AUX SIG connector on the server board (if available).
2. Connect the front panel cable from the front panel to the server board.
3. Connect the fan cables to the server board.
4. Connect the IDE cable(s) to the server board. Route the cable for the bottom hard drive bays between the foam epac and the chassis. You will not need to remove the lower foam epac. The IDE cables should lay as flat as possible so they don't obstruct the airflow from the fans.
5. Connect the floppy cable to the server board.
6. Connect the SCSI cable(s) to the server board.
 - The SCSI cable is already connected to the hot swap bay and is routed correctly.
 - Connect the SCSI cable to an LVD SCSI connector on your server board.
7. Connect the chassis intrusion cable to the server board.
8. Connect the I2C cable from the hot swap bay to the HSBP-A connector on the server board.
9. If desired connect the serial port 2 cable to the server board and mount it on the rear or front of the chassis.
10. Connect the USB cable from the front panel to the server board.

Install the Diskette Drive

NOTE

We highly recommend you use a magnetic screwdriver for this step. A nonmagnetic screwdriver may lose the screws between the chassis and the plastic bezel.


1. Remove the EMI shield that is mounted in the diskette drive carrier opening.
2. Remove the plastic filler panel.
3. Using a magnetic screwdriver, remove the two screws that hold the diskette drive carrier to the front of the chassis.
4. Slide the carrier towards the rear of the chassis, until it comes free.

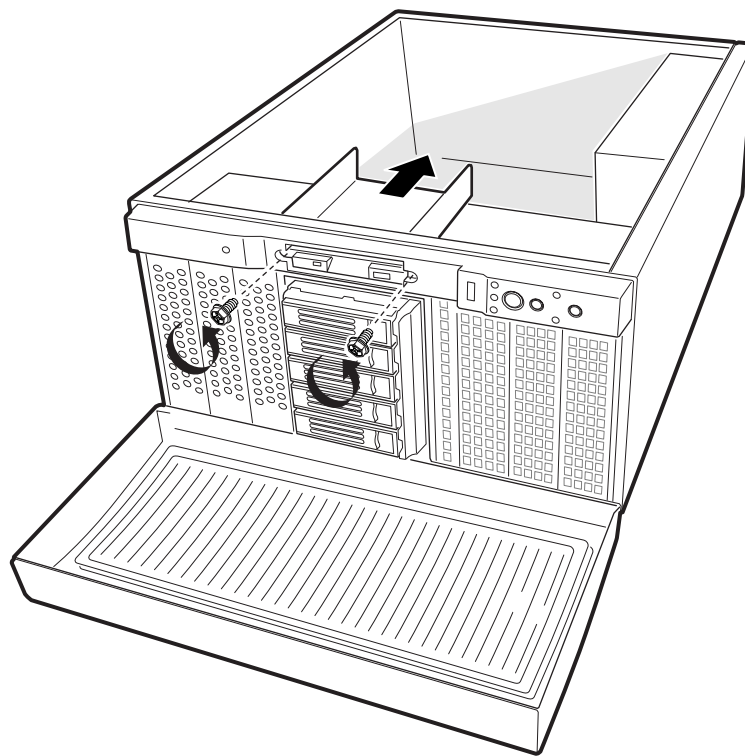

OM11960

Figure 11. Removing the Diskette Drive Carrier


5. Remove the 3.5-inch diskette drive from its protective wrapper. Record the drive model and serial numbers in your equipment log.
6. Set any jumpers or switches according to the drive manufacturer's instructions.
7. Slide the drive into the drive carrier component side down.

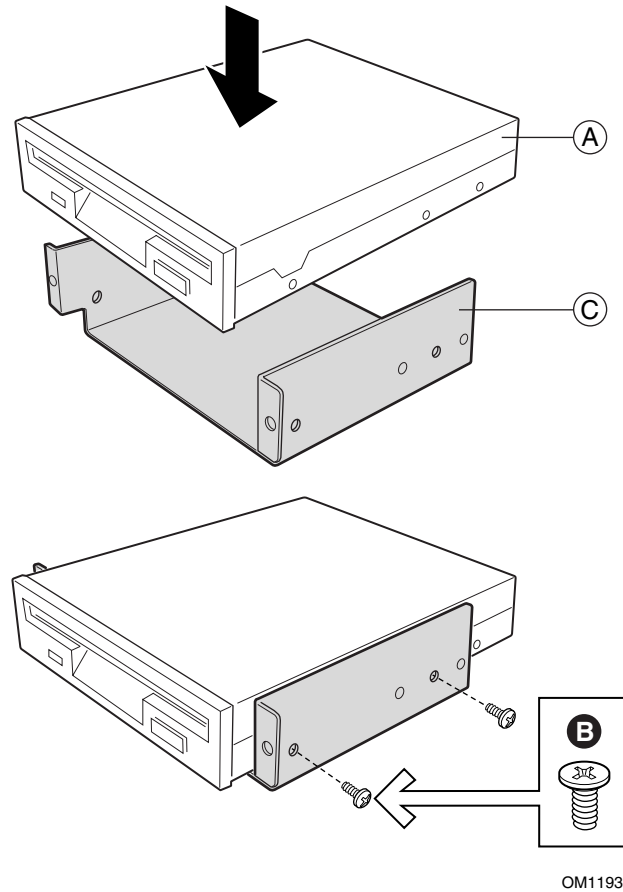

- A. Diskette drive
- B. Screw (M3 flat head)
- C. Carrier

Figure 12. Installing the Diskette Drive into the Drive Carrier

8. Insert and tighten four screws (fine thread flat head) to attach the drive to the carrier.
9. Position the carrier so the front of the drive fits correctly in the front opening of the chassis. When properly positioned, the hole in the carrier aligns with the threaded hole in the frame.
10. Secure the assembly to the front of the chassis with the two screws removed in step 1; tighten the screws firmly.
11. Connect data and power cables to the drive.

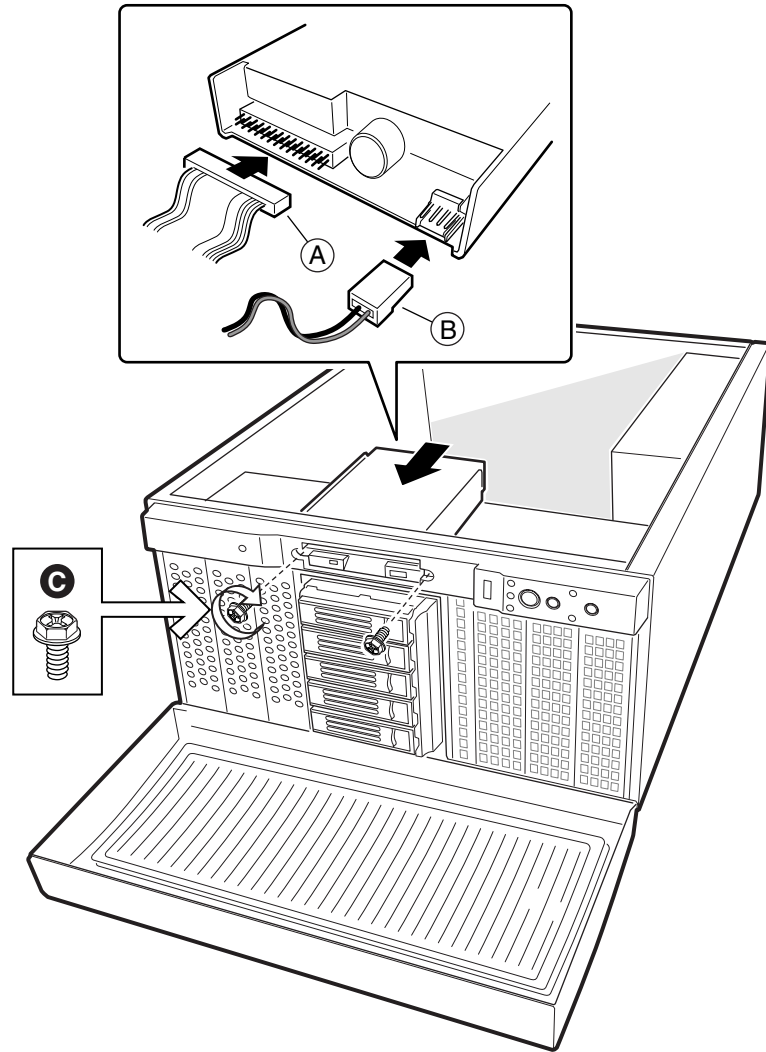

OM11933

- A. Data cable
- B. Power cable

Figure 13. Installing the Diskette Drive/Carrier Assembly

Hard Drives

Drive Cabling Considerations

The cables that ship with the chassis are pre-folded to fit the chassis. To minimize the chance of damaging a cable, you should keep the cables folded correctly. The number of devices you can install depends on:

- The number supported by the bus on your server board
- The number of physical drive bays available
- The combination of SCSI and IDE devices

IDE Requirements

If no drives are present on an IDE channel, the cable must be removed. If only one drive is installed, it should be connected at the end of the cable.

NOTE

To disable the IDE controller: If you plan to disable the IDE controller to reuse the interrupt for that controller, you must physically unplug the IDE cable from the board connector if a cable is present. Simply disabling the drive by configuring the SSU option does not make the interrupt available.

SCSI Requirements

If the optional hot swap bay is installed, one Ultra160 SCSI cable is provided with the chassis to connect the hot swap backplane with the server board. This cable should be connected to an LVD connector on the server board.

Installing a 5.25-inch Removable Media Device

Two 5.25-inch half-height bays provide space for tape backup, CD-ROM, or other removable media drives.


NOTES

Save the EMI shields: EMI integrity and cooling are both protected by having drives installed in the bays or EMI shields covering the bays. When you install a drive, save the shield to reinstall in case you should later remove the drive and not reinstall one in the same bay.

CAUTION

For proper cooling, you must leave the bottom bay empty.


1. Remove the two screws that hold the shield in place.
2. Pull the shield out of the chassis. Save the shield for use if you remove the peripheral.

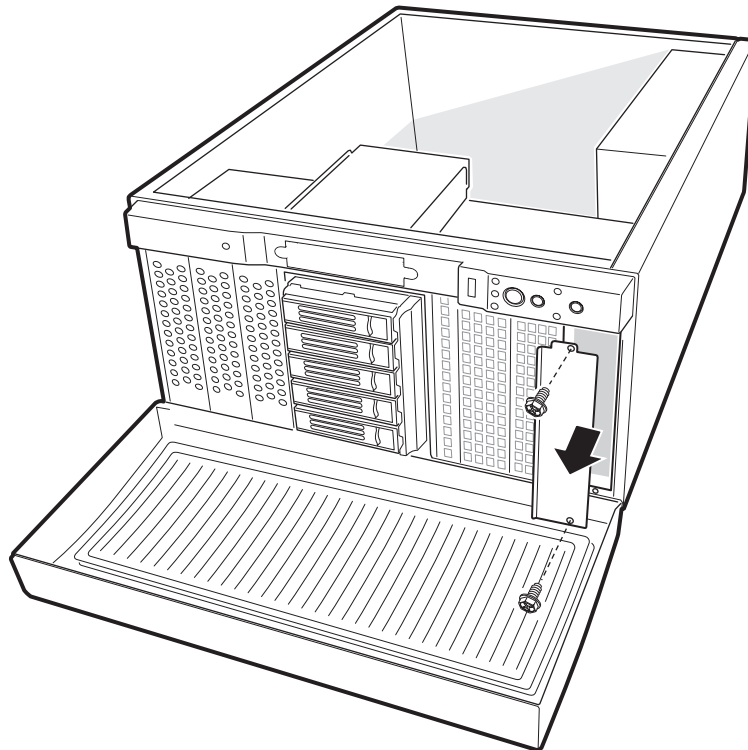

OM13715

Figure 14. Removing EMI Shields

3. Remove the drive from its protective wrapper and place it on an antistatic surface.
4. Record the drive model and serial numbers in your equipment log.
5. Set any jumpers or switches on the drive according to the drive manufacturer's instructions.
6. Using four screws of the appropriate size and length, attach two slide rails to the drive.

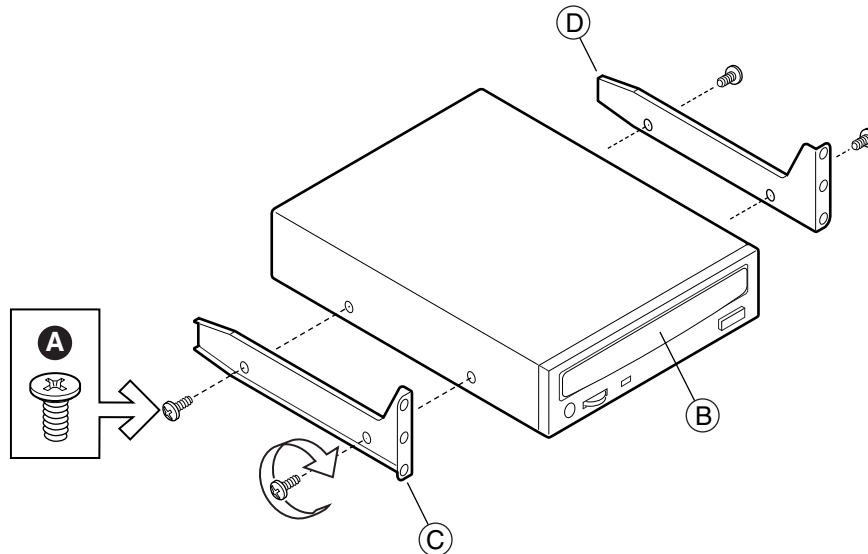


OM11941

- A. Screws (M3 flat head)
- B. CD-ROM drive or other removable media device
- C. Left rail
- D. Right rail

Figure 15. Slide Rails

7. Position the drive so the slide rails engage in the bay guide rails. Push the drive into the bay until the slide rails are flush with the chassis.

8. Connect the data cable to the drive. The connectors are keyed and can be inserted in only one way.
9. Connect a power cable to the drive.

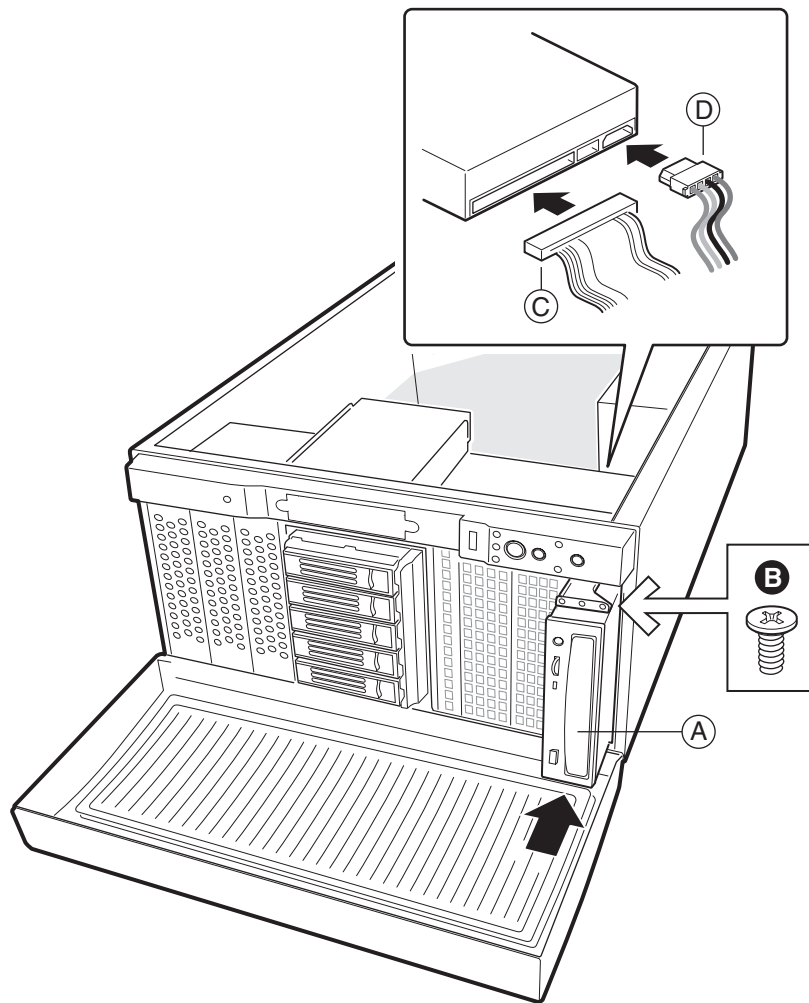

OM13717

- A. Removable media device
- B. Screw
- C. Data cable
- D. Power cable

Figure 16. Installing a Removable Media Device


Installing a 5.25-inch or 3.5-inch Hard Drive

CAUTION

For proper cooling, you must leave the bottom bay empty.

Five (two with the optional hot swap bay) 5.25-inch half-height bays provide space for hard drives.

1. If you haven't already done so, remove the top piece of foam epac from the system fans.
2. Remove and save the two screws that secure the drive carrier to the chassis.
3. Slide the drive carrier out of the chassis. You may need to push the carrier from the inside of the chassis.

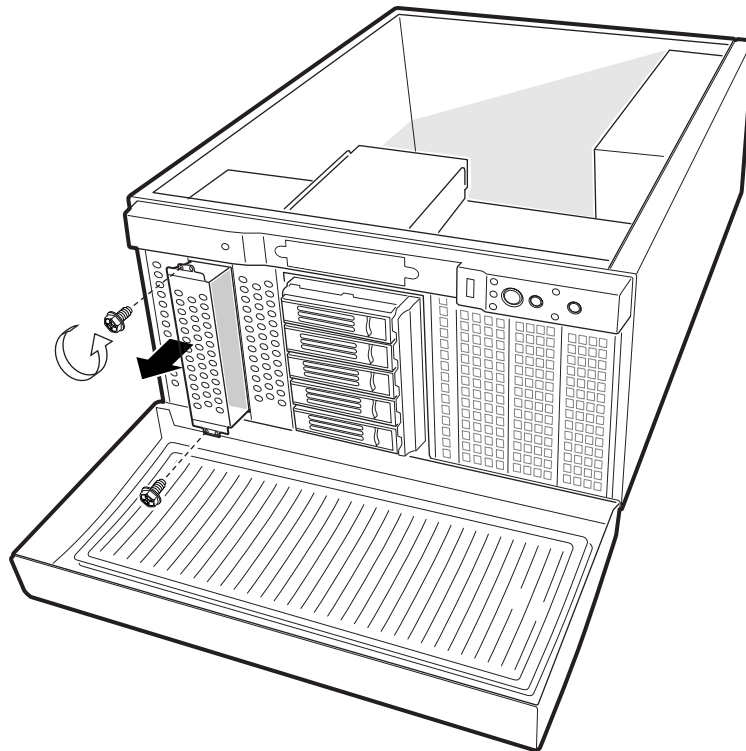


OM11947

Figure 17. Removing a Drive Carrier

4. Remove the drive from its protective wrapper and place it on an antistatic surface.
5. Record the drive model and serial numbers in your equipment log.
6. Set any jumpers or switches on the drive according to the drive manufacturer's instructions.

7. Place the drive into the carrier component side down and with the power and data connectors facing the rear of the carrier. The connectors should be flush with the rear of the carrier.
8. Holding the drive in place, turn the carrier upside down.

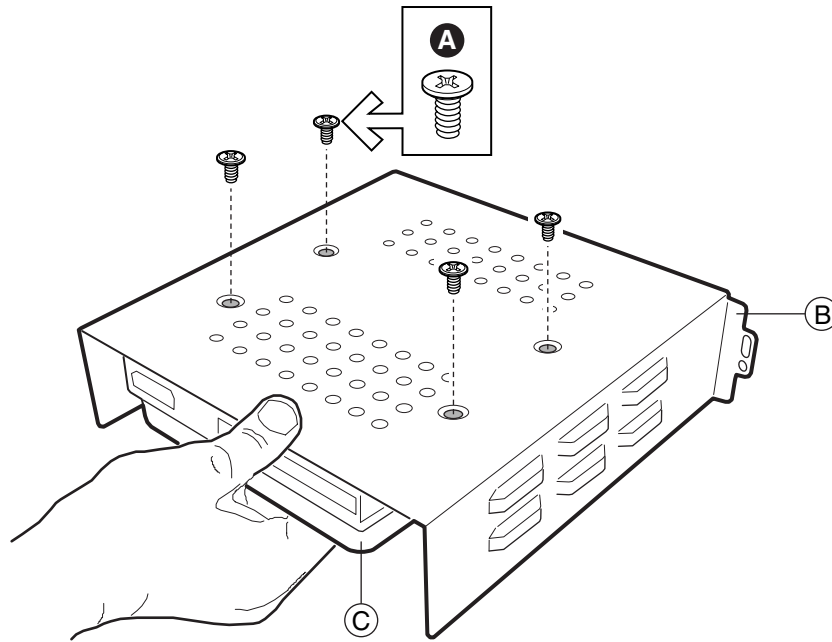


OM11943

- A. Screw (6-32 flat head)
- B. Drive carrier
- C. Hard drive

Figure 18. Attaching a Hard Drive to a Carrier

9. Line up the screws holes in the carrier with the screw holes in the drive.
10. Using four screws of the appropriate size and length, attach the drive to the carrier.

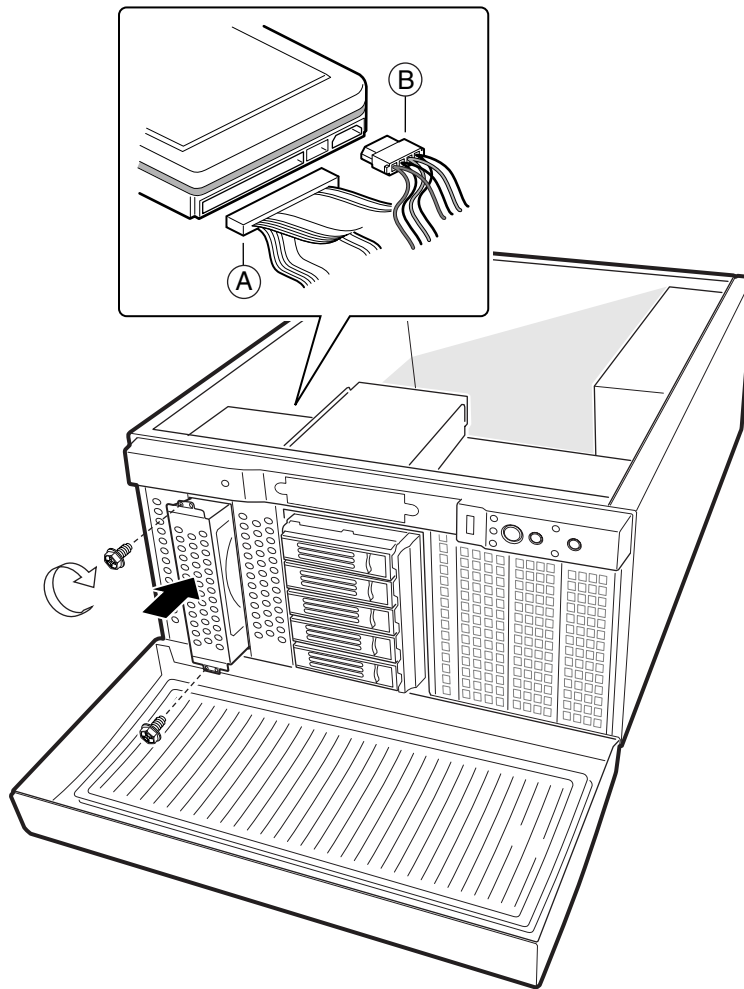

OM11948

- A. Data cable
- B. Power cable

Figure 19. Installing a Carrier

11. Slide the carrier into the chassis.
12. Insert and tighten the screws removed in Step 1.
13. Attach data and power cables to the drive.

Hot Swap SCSI Hard Disk Drives

The chassis may contain the optional hot swap drive bay and 5 drive carriers, but no hard disk drives. Refer to the Intel customer support website for a list of approved SCSI devices.




CAUTION

Electrostatic discharge (ESD) and ESD protection: ESD can damage disk drives, add-in boards, and other components. This server can withstand normal levels of environmental ESD while you are hot-swapping SCSI hard disk drives. However, we recommend doing all procedures in this manual only at an ESD-protected workstation. If one is not available, you can provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground of the server—any unpainted metal surface—when handling components.

Installing a Hot Swap Hard Disk Drive

1. Press the latch on the top of the carrier handle down, pull the carrier handle toward you, and pull the carrier from the chassis.
2. Remove the four screws that hold the air baffle to the carrier.

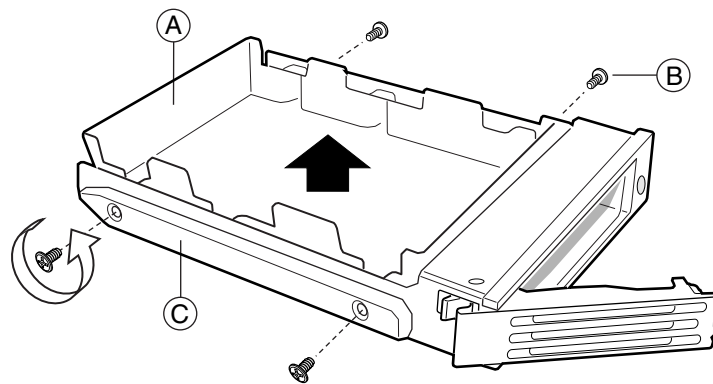


OM11940

- A. Air baffle (save for reuse)
- B. Screw (6-32 flat head)
- C. Drive carrier

Figure 20. Removing the Air Baffle from the Drive Carrier

3. Remove the 3.5-inch hard drive from its wrapper and place it on an antistatic surface.
4. Record the drive model and serial number in your equipment log.
5. Orient the drive as shown in Figure 21.
6. Using the four screws removed earlier, attach the carrier to the drive.

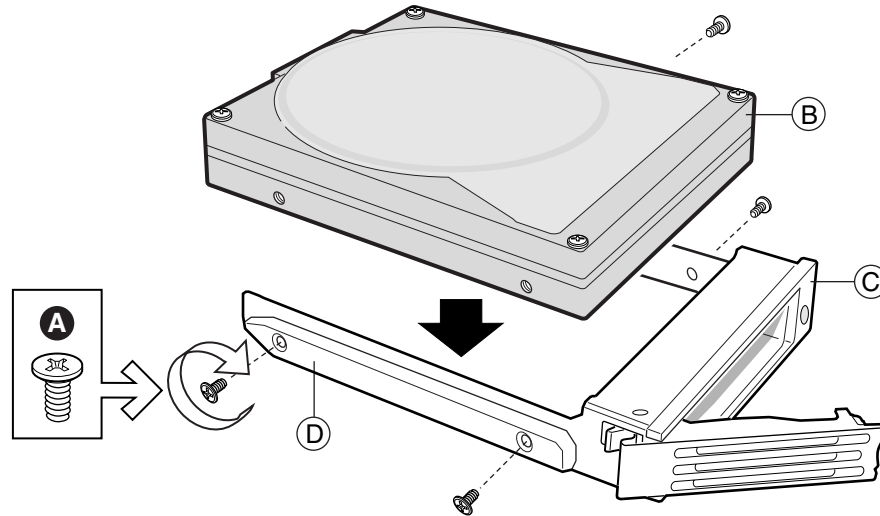


OM11935

- A. Screw (6-32 flat head)
- B. Hard drive
- C. Drive carrier
- D. Positioning rail

Figure 21. SCA Hard Disk Drive and Hot Swap Drive Carrier

7. Position the drive carrier so it engages the guide rails.
8. Push the drive into the chassis until the tab engages the hole in the drive bay.
9. Push the carrier handle up until the latch clicks.

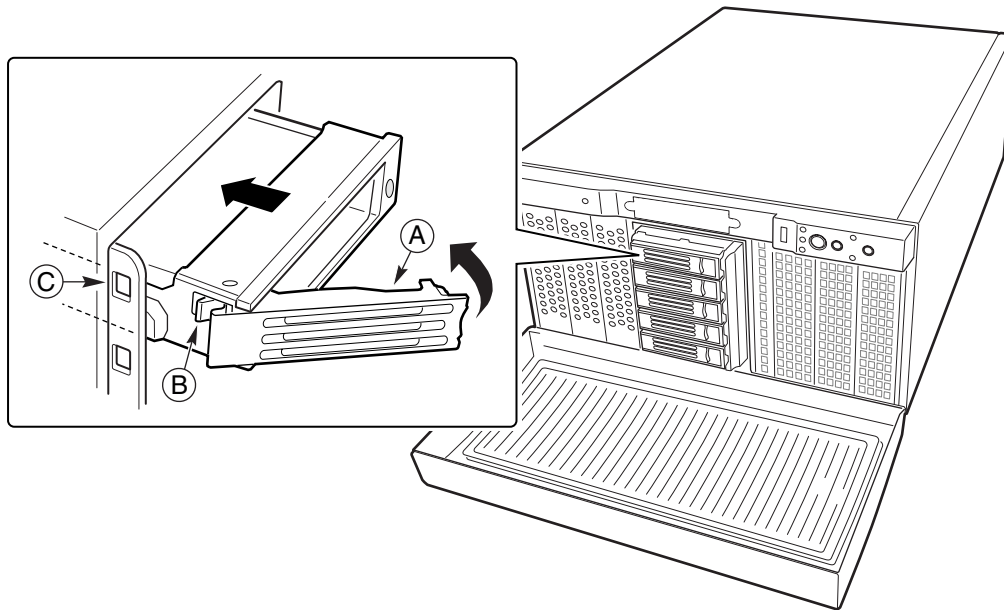

OM11946

- A. Latch
- B. Tab
- C. Hole

Figure 22. Inserting a Hot Swap Drive

Installing an Add-in Board

You may want to install an operating system before installing any add-in boards. If so, skip this step and return to it when you are ready.

CAUTIONS


Do not overload the server board by installing add-in boards that draw excessive current.

Add-in boards can be extremely sensitive to ESD and always require careful handling. After removing the board from its protective wrapper or from the server board, place it component side up on a grounded, static free surface or conductive foam pad—if available. Do not slide the board over any surface.

NOTE

You may have to remove the serial port cable to install a board in slot 5 or slot 6.

1. Remove and save the snap-in expansion slot cover.
2. Remove the screw for the expansion slot.
3. Remove add-in board from its protective wrapper. Be careful not to touch the components or gold edge connectors. Place board on an antistatic surface.
4. Record the type and serial number of the add-in board in your equipment log.
5. Set jumpers or switches according to the manufacturer's instructions.
6. Hold board by its top edge or upper corners. Firmly press it into an expansion slot on the server board. The tapered foot of the board retaining bracket must fit into the slot in the expansion slot frame.
7. Align the rounded notch in the retaining bracket with the threaded hole in the frame. The bracket fits the space that was occupied by the slot cover.
8. Use the screw removed earlier. Insert it into the threaded hole, and tighten it firmly. Attach cables if necessary.

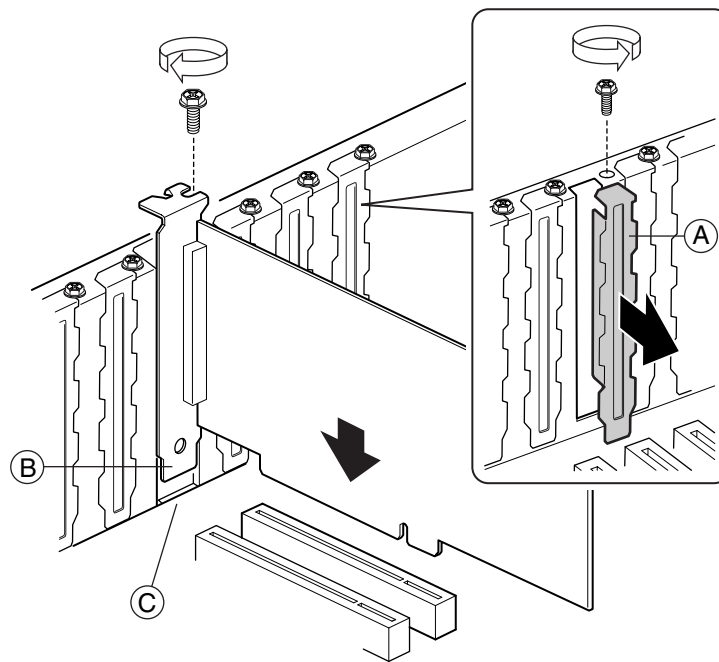

OM11961

- A. Snap-in slot cover
- B. Tapered foot
- C. Slot


Figure 23. Installing an Add-in Board

Install the Upper Foam Epac

1. Make sure the fan cables are in their slots in the lower foam epac.
2. Place the upper part of the foam epac into the chassis.
3. Press the foam epac into place. You may need to wiggle the fans to get it to sit flush with the lower foam epac.

Install the Access Cover

1. Place the cover so the tabs go into the slots on the server. The cover should be flush against the chassis.
2. Slid the cover forward until it stops.
3. Tighten the two captive screws into the rear of the chassis.

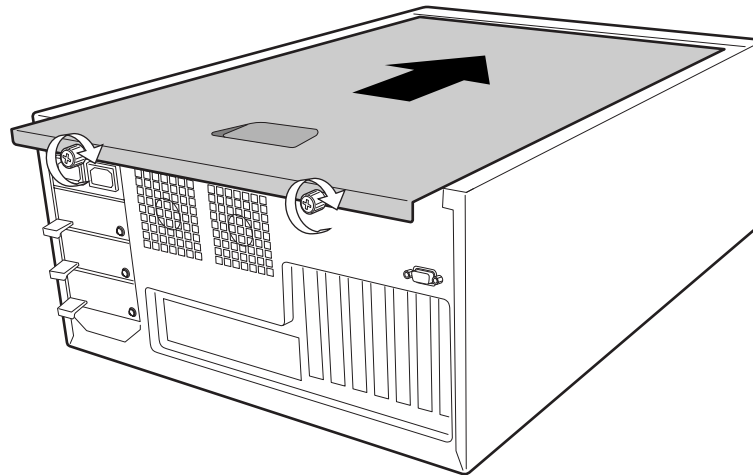


OM11928

Figure 24. Installing the Access Cover

Install the Chassis Feet (Pedestal Mode)

If you are installing this server into a rack system, skip these steps and read the instructions that came with your rack kit.

1. Move the chassis to the edge of your workbench.
2. Use four screws to attach each foot to the chassis. The holes in the feet will line up with only one set of holes in the chassis. On the front foot, the middle hole should be towards the front of the chassis. Hole locations for the front foot are marked “F” and “1,2”. On the back foot, the middle hole should be towards the back of the chassis. Hole locations for the rear foot are marked “F”.
3. You are now ready to attach a monitor, keyboard, and mouse to your server, and turn it on.

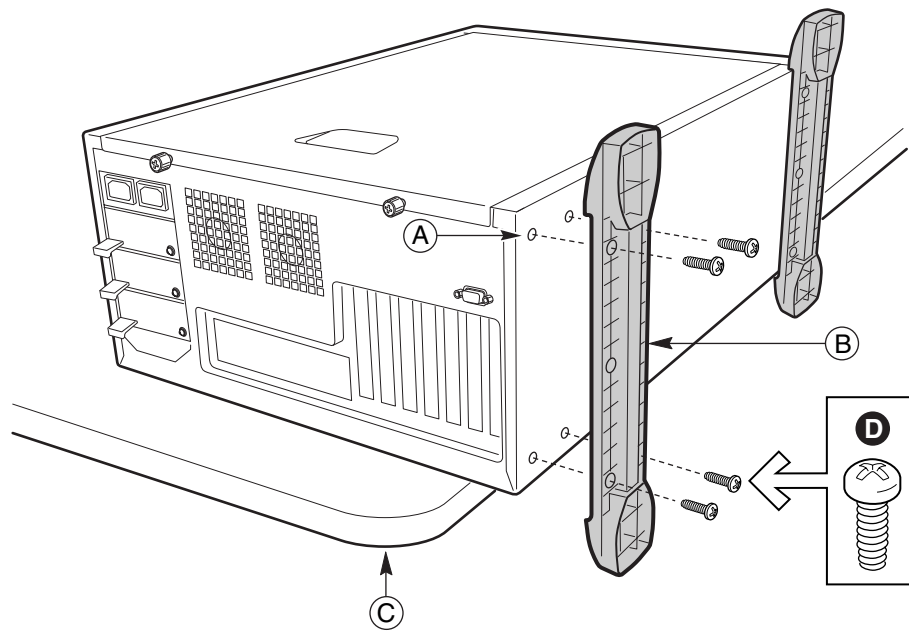

OM11930

- A. Screw hole
- B. Chassis foot
- C. Workbench
- D. Screw (M4 round head)

Figure 25. Installing the Chassis Feet


Install into a Rack (Rack Mode)

NOTE

Your chassis is designed to be compatible with the EIA-310-d rack standard. Be sure to select a rack cabinet enclosure that is EIA-310-d compliant. For additional compatibility and rack cabinet selection information, see:

<http://support.intel.com/support/motherboards/server/chassis/sc5200>


1. Fully extend the rails.
2. Remove the smallest rail.
3. Position the rail.
4. Insert and tighten four screws.

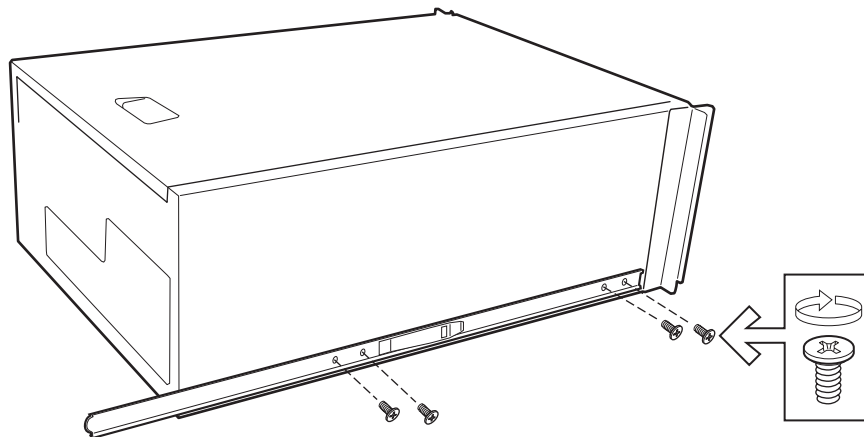

OM13734

Figure 26. Attaching the Rail to the Chassis

5. Install the rest of the rail in your rack.

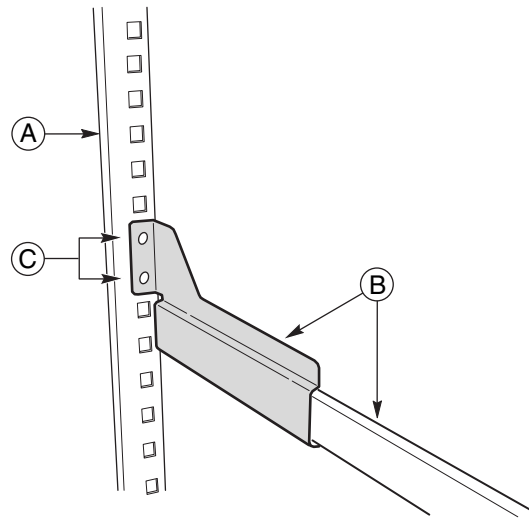

OM11973


- A. Rack
- B. Rail Assembly
- C. Mounting Holes

Figure 27. Rails Installed in a Rack

 **NOTE**

Your rack may vary from the illustration. Refer to your rack documentation for information specific to your rack.

6. Hold the chassis so the rails on the chassis engage the rails in your rack. You will need someone to help you at this point.
7. Disengage the locking tab on each rail and slide the server into the rack.

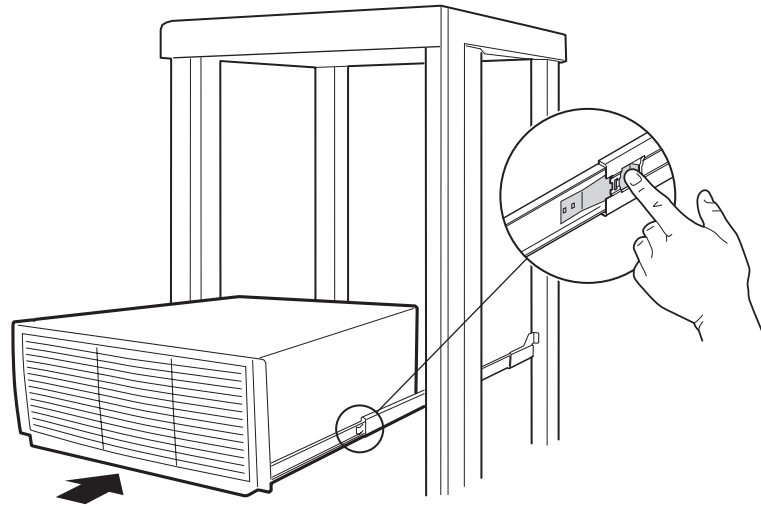

OM13736

Figure 28. Installing the Server into a Rack

3 Maintaining Your Server

This chapter describes how to replace components in your server after it has been set up. All references to top, sides, and directions in this chapter refer to a chassis in a pedestal mount.

Tools and Supplies Needed

- Phillips (cross head) screwdriver (#2 bit)
- Antistatic wrist strap (recommended)
- Needle-nosed pliers

Safety: Before You Remove the Access Cover

Before removing the access cover for any reason, observe these safety guidelines:

1. Turn off all peripheral devices connected to the server.
2. Turn off the server by pressing the power button on the front of the chassis. Then unplug the AC power cord from the chassis or wall outlet.
3. Label and disconnect all peripheral cables and all telecommunication lines connected to I/O connectors or ports on the back of the chassis.
4. Provide some electrostatic discharge (ESD) protection by wearing an antistatic wrist strap attached to chassis ground—any unpainted metal surface—when handling components.

Warnings and Cautions

These warnings and cautions apply whenever you remove the access cover to access components inside the server. Only a technically qualified person should integrate and configure the server.



WARNINGS

The power button on the front panel DOES NOT turn off the AC power. To remove power from server, you must unplug the AC power cord from the wall outlet or the chassis.

Hazardous electrical conditions may be present on power, telephone, and communication cables. Turn off the server and disconnect the power cords, telecommunications systems, networks, and modems attached to the server before opening it. Otherwise, personal injury or equipment damage can result.

Hazardous voltage, current, and energy levels are present inside the power supply. There are no user-serviceable parts inside it; servicing should be done by technically qualified personnel.



CAUTIONS

ESD can damage disk drives, boards, and other parts. Perform all procedures in this chapter only at an ESD workstation. If one is not available, provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground—any unpainted metal surface—on your server when handling parts.

Always handle boards carefully. They can be extremely sensitive to ESD. Hold boards only by their edges. Do not touch the connector contacts. After removing a board from its protective wrapper or from the server, place the board component side up on a grounded, static free surface. If you place the server board on a conductive surface, the battery leads may short out. If they do, this will result in a loss of CMOS data and will drain the battery. Use a conductive foam pad if available but not the board wrapper. Do not slide board over any surface.

For proper cooling and airflow, always install the access cover before turning on the server. Operating it without the cover in place can damage system parts.

Replacing Fans

The chassis contains four replaceable system fans. The power supply fan(s) are not replaceable. Your replacement fan should be the same size and type as the fan you are removing.

Replacing a Front System Fan

1. Remove the access cover.
2. Remove the top part of the foam epac.
3. Disconnect the fan cable from the server board.
4. Remove the fan from the lower part of the foam epac.
5. Place the new fan into the foam epac. Make sure the airflow is towards the server board. For most fans, this means the label should face the server board.
6. Connect the fan cable to the server board.
7. Replace the upper foam epac.
8. Replace the access cover.

Replacing a Rear System Fan

1. Remove the access cover.
2. Disconnect the fan cable from the server board.
3. Remove the fan from the bracket.
4. Place the new fan into the bracket. Make sure the airflow out of the back of the chassis. For most fans, this means the label should face the back of the chassis.
5. Connect the fan cable to the server board.
6. Replace the access cover.


Replacing a Power Supply

WARNINGS

Hazardous conditions, power supply: Hazardous voltage, current, and energy levels are present inside the power supply. There are no user-serviceable parts inside it; servicing should be done by technically qualified personnel.

350 or 650 Watt Hot Swap Power Supply Modules

1. Grasp the handle with your right hand, press the latch with your thumb.
2. Pull the handle down.
3. Slide the module out of the chassis.
4. Push the new power supply into the chassis until the latch clicks into place.

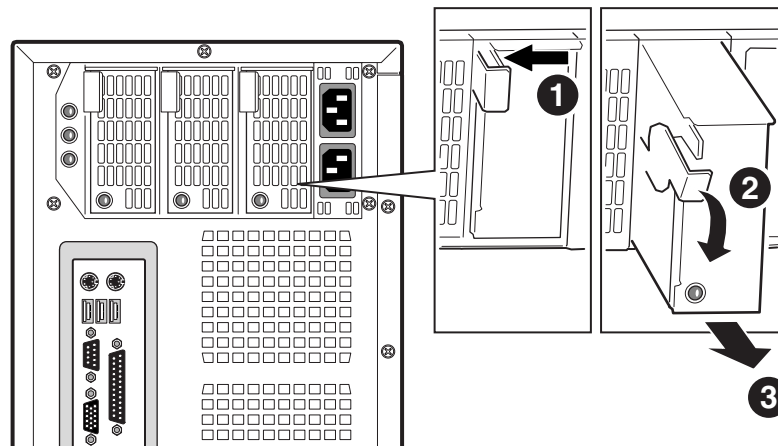


OM11951

Figure 29. Hot Swapping a Power Supply

350 or 650 Watt AC Power Supply Housing

The following procedures and illustrations are for the 650 watt power supply. The procedures for the 350 watt power supply are similar.

1. Disconnect the A/C power to the power supply.
2. Remove the hot swap modules.
3. Remove the access cover.
4. Disconnect all the power cables.
5. Remove and save the four screws at the rear of the chassis (Figure 30, B).
6. Remove and save the two screws from inside the chassis at the fan end of the power supply housing (Figure 30, A).

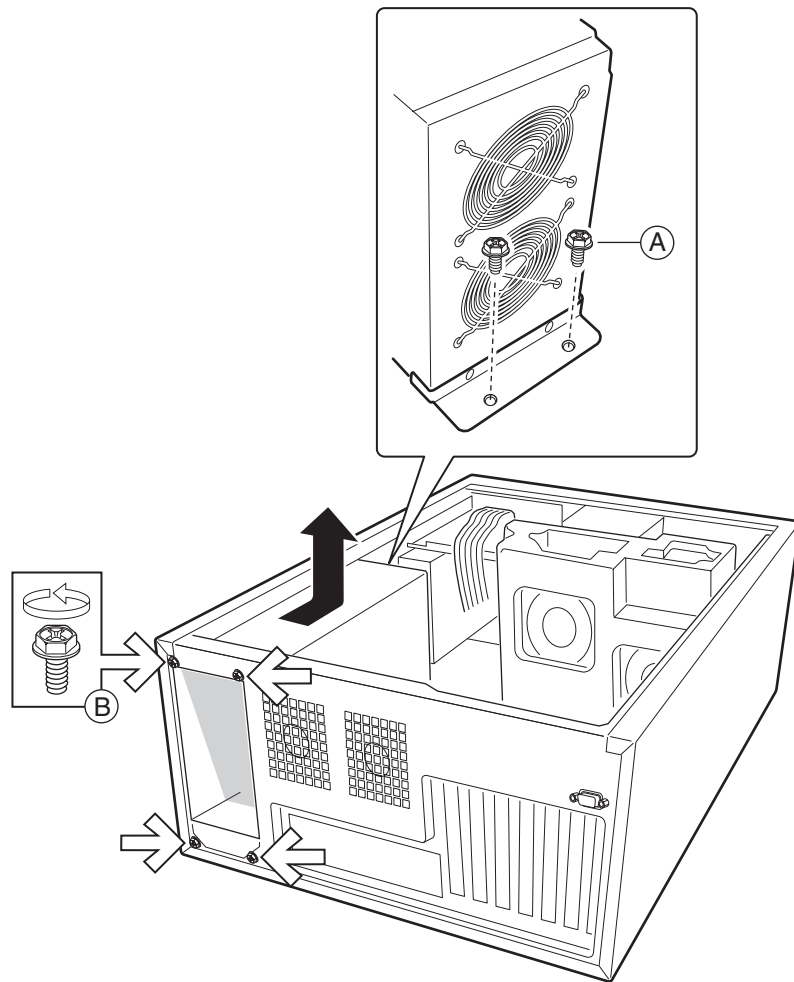

OM13718

A. Screw locations

B. Screw locations


Figure 30. Replacing the 350 or 650 Watt AC Power Supply Module

7. Remove the power supply from the chassis.
8. If necessary, remove the bracket from the fan end of the old module and install it on the new module.
9. Install the new power supply into the chassis.
10. Insert and tighten the six screws (four at the rear, two at the fan end) that hold the power supply to the chassis.
11. Connect the power cables to the server board and peripherals.
12. Replace the access cover.
13. Reinstall the hot swap modules.
14. Connect the A/C power to the power supply.

300 or 550 Watt Power Supply

The following procedures and illustrations are for the 300 watt power supply. The procedures for the 550 watt power supply are similar.

1. Disconnect the A/C power to the power supply.
2. Remove the access cover.
3. Disconnect all the power cables.
4. Remove and save the four screws that hold the power supply and bracket to the chassis.
5. If necessary, remove the two screws holding the front of the power supply to the chassis.
6. Remove the power supply and bracket from the chassis.
7. Remove and save the two screws that hold the power supply to the bracket.
8. Install the new power supply onto the bracket using the two screws removed above.
9. Insert the power supply/bracket into the chassis.
10. Insert and tighten the screws that hold the power supply/bracket to the chassis.
11. Connect the power cables to the server board and peripherals.
12. Replace the access cover.
13. Connect the A/C power to the power supply.

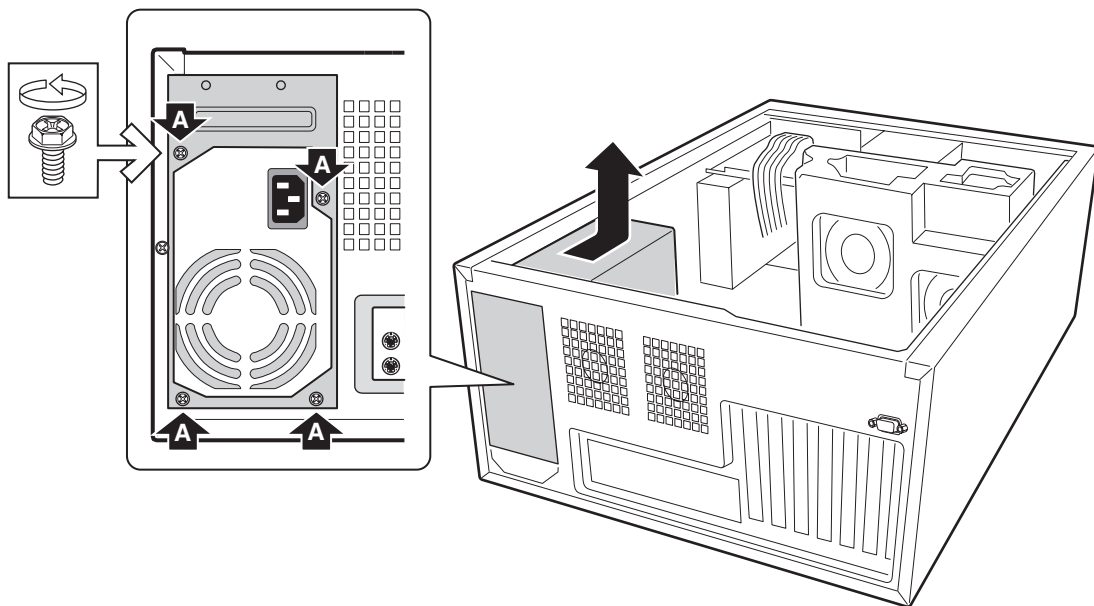


OM13719

A. Screw locations

Figure 31. Replacing the 300 Watt AC Power Supply

Replacing the Front Panel Board

1. Open the access cover.
2. Disconnect the front panel cable from the front panel.
3. Disconnect the USB cable from the connector on the front panel.
4. Remove and save the three screws holding the front panel board to the chassis.
5. Remove the front panel board from the chassis.
6. Place the new front panel board in the chassis.
7. Insert and tighten the three screws removed earlier.
8. Re-connect the front panel board cables.
9. Replace the access cover.

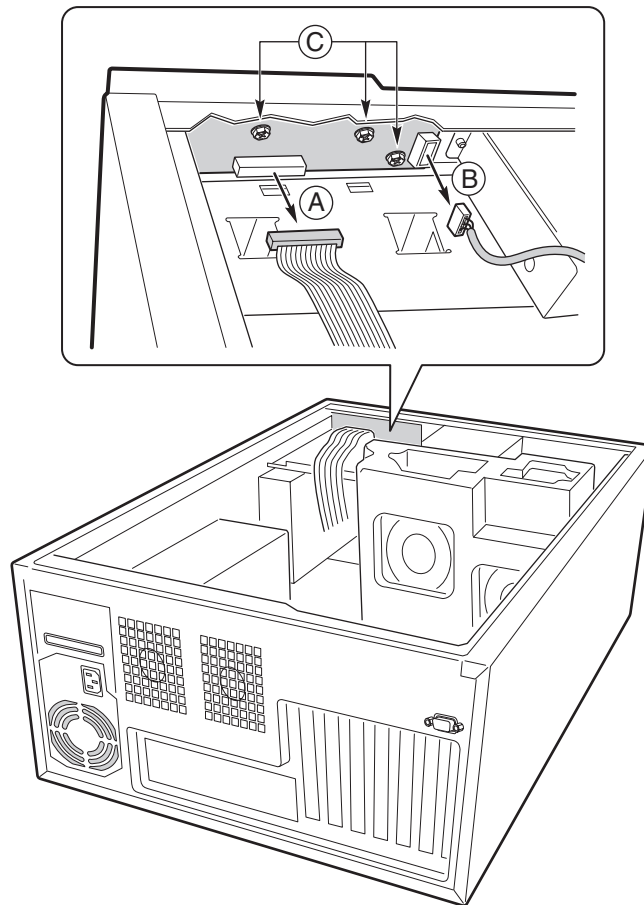


OM13716

- A. Front panel connector to the server boards
- B. USB connector
- C. Screw

Figure 32. Replacing the Front Panel Board

Replacing the Hot Swap Backplane and SAF-TE Card


1. Open the access cover.
2. Remove the top part of the foam epac.
3. Remove all of the drive carriers from the hot swap bay.

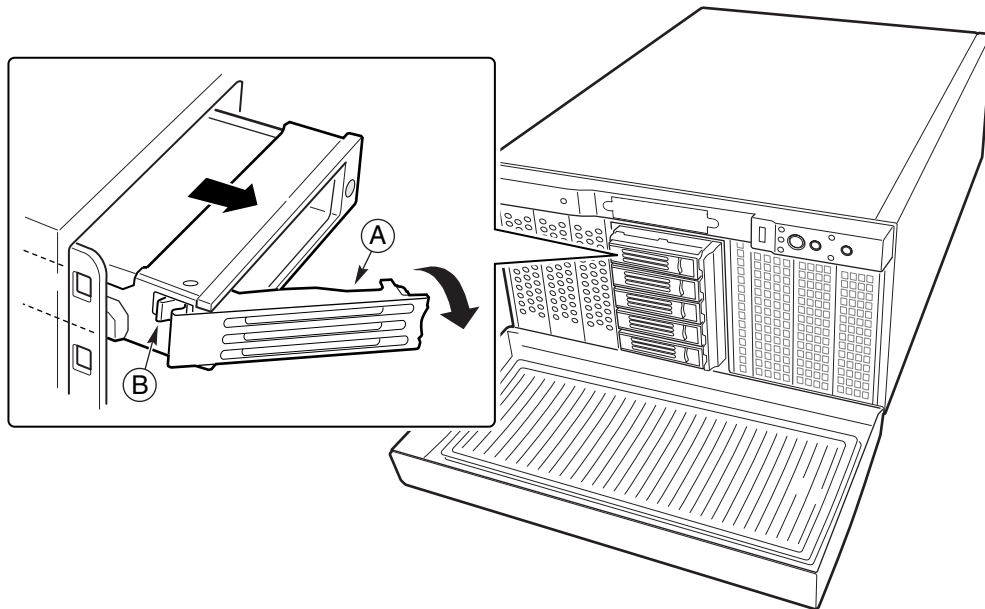

OM11937

Figure 33. Removing the Hot Swap Drive Carriers

4. Disconnect the power cables and I2C cable from the hot swap bay.
5. Remove and save the five screws holding the hot swap bay to the chassis.

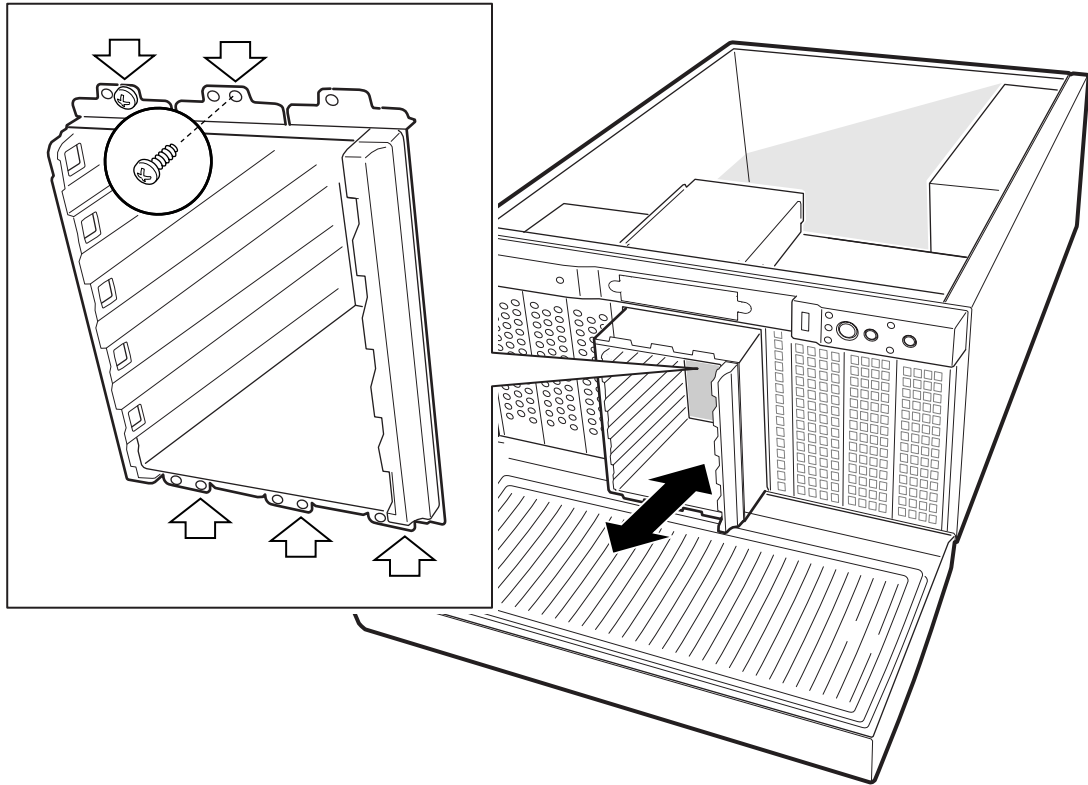


OM11944

Figure 34. Removing the Hot Swap Drive Bay

6. Pull the hot swap bay half way out of the chassis.
7. Disconnect the SCSI cable from the bay.
8. Remove the hot swap bay from the chassis.

9. Remove and save the four screws that hold the backplane to the bay.

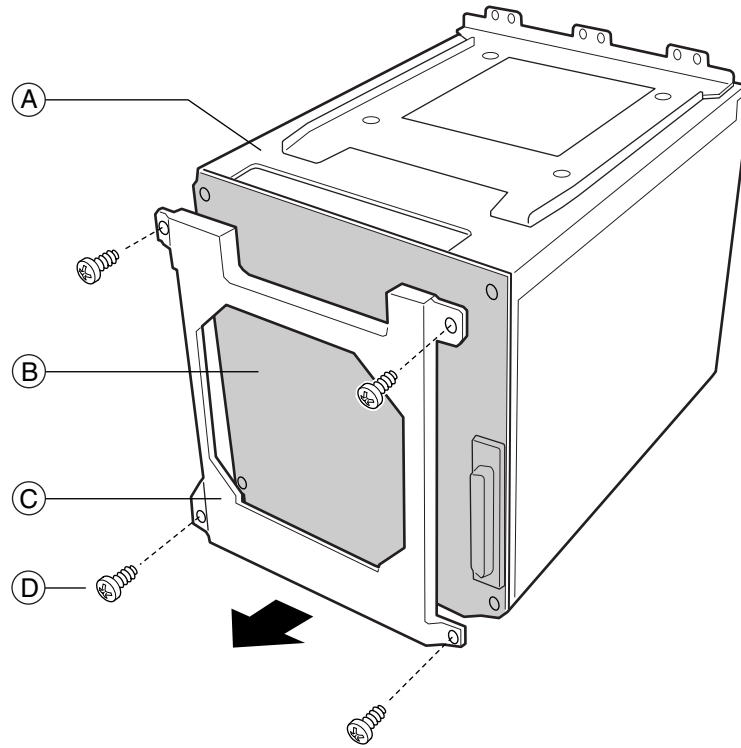


OM11945

- A. Hot swap bay
- B. Hot swap backplane
- C. Bracket
- D. Screw

Figure 35. Removing the Hot Swap Backplane

- Carefully pull the backplane straight out from the bay. The SAF-TE card is connected to the backplane and may be damaged if you don't pull it straight out.

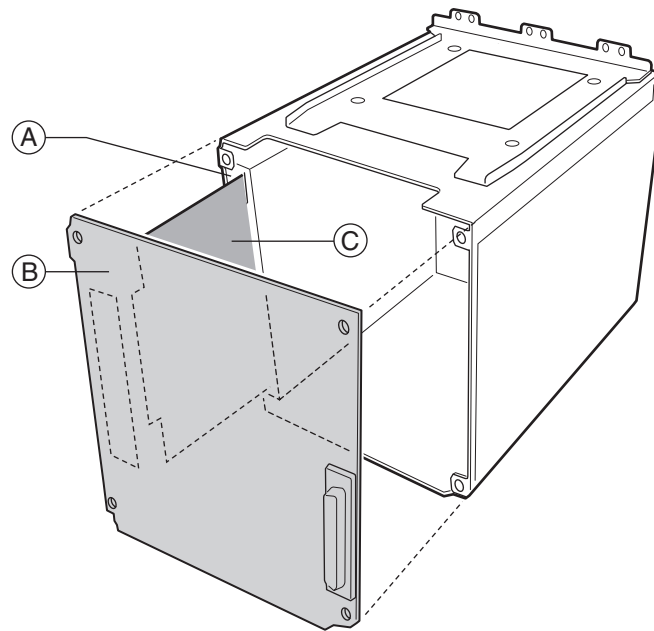


OM14402

- A. Notch for SAF-TE card
- B. Hot swap backplane
- C. SAF-TE card

Figure 36. Replacing the Hot Swap Backplane

11. If you are replacing the hot swap backplane, do the following:
 - a. Remove the SAF-TE card from the old hot swap backplane.
 - b. Plug the SAF-TE card into the new hot swap backplane.
12. If you are replacing the SAFE-TE card, do the following:
 - a. Remove the old SAF-TE card from the hot swap backplane.
 - b. Plug the new SAF-TE card into the hot swap backplane.

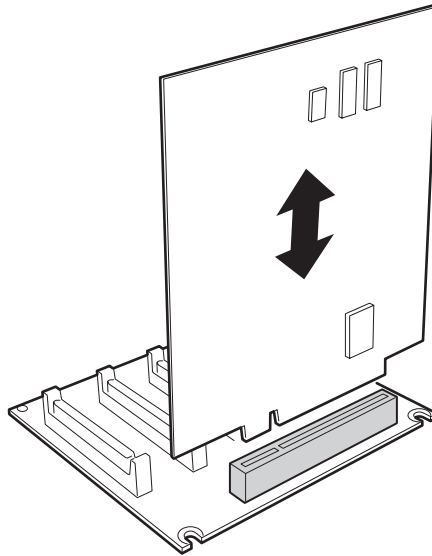

OM14401

Figure 37. SAF-TE Card and Hot Swap Backplane

13. Carefully slide the SAF-TE card/hot swap backplane assembly into place on the hot swap bay.
The SAF-TE card slides through two notches on the bay.
14. Place the bracket on the backplane.
15. Insert and tighten the four screws that hold the backplane in place.
16. Slide bay half way into the chassis.
17. Connect the SCSI cable to the backplane.
18. Slide the bay the rest of the way into the chassis.
19. Insert and tighten the five screws that hold the bay in the chassis.
20. Connect the power cables and I2C cable to the backplane.
21. Install the top half of the foam epac.
22. Replace the access cover.
23. Replace the hot swap drives and carriers.

4 Technical Reference

Power Supply Specifications

Input Voltages

300 Watt Power Supply

- 100-120 V~ at 50/60 Hz; 6.7 A max.
- 200-240 V~ at 50/60 Hz; 3.35 A max.

350 Watt 1+1 Power Supply

- 100-120 V~ at 50/60 Hz; 9 A max.
- 200-240 V~ at 50/60 Hz; 4.5 A max.

550 Watt Power Supply

- 100-120 V~ at 50/60 Hz; 11.6 A max.
- 200-240 V~ at 50/60 Hz; 4.8 A max.

650 Watt 2+1 Power Supply

- 100-120 V~ at 50/60 Hz; 13.4 A max.
- 200-240 V~ at 50/60 Hz; 16.7 A max.

Output Voltages

300 Watt Power Supply

The table below lists the total wattage available from the power subsystem for each voltage. If you configure your system heavily, ensure that your loads do not exceed the combined total wattage of 300 watts. For information about calculating the power usage for your configuration, see page 67.

Table 3. Power Supply System Output Capability

| Voltage | Maximum Current |
|-------------|-----------------|
| +3.3 V | 28 A |
| +5.0 V | 30 A |
| -5 V | 0.3 A |
| +5V Standby | 2 A |
| +12.0 V | 15 A |
| -12.0 V | 0.8 A |



CAUTION

Do not exceed a combined power output of 220 watts for the +5 V and +3.3 V outputs. Exceeding a combined 220 watts will overload the power subsystem and may cause the power supplies to overheat and malfunction.

The expansion slots on the server board are rated for no more than 25 watts for any one slot. The average current usage per slot should not exceed 13 watts.

350 Watt Power Supply

The table below lists the total wattage available from the power subsystem for each voltage. If you configure your system heavily, ensure that your loads do not exceed the combined total wattage of 350 watts. For information about calculating the power usage for your configuration, see page 67.

Table 4. Power Supply System Output Capability

| Voltage | Maximum Current |
|-------------|-----------------|
| +3.3 V | 20 A |
| +5.0 V | 20 A |
| +5V Standby | 2 A |
| +12.0 V | 25 A |
| -12.0 V | 0.5 A |



CAUTION

Do not exceed a combined power output of 150 watts for the +5 V and +3.3 V outputs. Exceeding a combined 150 watts will overload the power subsystem and may cause the power supplies to overheat and malfunction.

The expansion slots on the server board are rated for no more than 25 watts for any one slot. The average current usage per slot should not exceed 13 watts.

550 Watt Power Supply

The table below lists the total wattage available from the power subsystem for each voltage. If you configure your system heavily, ensure that your loads do not exceed the combined total wattage of 550 watts. For information about calculating the power usage for your configuration, see page 67.

Table 5. Power Supply System Output Capability

| Voltage | Maximum Current |
|-------------|-----------------|
| +3.3 V | 24 A |
| +5.0 V | 24 A |
| +5V Standby | 2 A |
| +12.0 V | 35 A |
| -12.0 V | 0.5 A |



CAUTION

Do not exceed a combined power output of 140 watts for the +5 V and +3.3 V outputs. Exceeding a combined 140 watts will overload the power subsystem and may cause the power supplies to overheat and malfunction.

The expansion slots on the server board are rated for no more than 25 watts for any one slot. The average current usage per slot should not exceed 13 watts.

650 Watt Power Supply

The table below lists the total wattage available from the power subsystem for each voltage. If you configure your system heavily, ensure that your loads do not exceed the combined total wattage of 650 watts. For information about calculating the power usage for your configuration, see page 67.

Table 6. Power Supply System Output Capability

| Voltage | Maximum Current |
|-------------|-----------------|
| +3.3 V | 38 A |
| +5.0 V | 38 A |
| +5V Standby | 2 A |
| +12.0 V | 47.5 A |
| -12.0 V | 0.5 A |



CAUTION

Do not exceed a combined power output of 285 watts for the +5 V and +3.3 V outputs. Exceeding a combined 285 watts will overload the power subsystem and may cause the power supplies to overheat and malfunction.

The expansion slots on the server board are rated for no more than 25 watts for any one slot. The average current usage per slot should not exceed 13 watts.

Environmental Specifications

Table 7. Environmental Specifications

| | |
|-------------------------------|---|
| Temperature | |
| Non-operating | -40° to 70 °C. |
| Operating | 5° to 35 °C; derated 0.5 °C for every 1000 ft (305 m) to a maximum of 10,000 ft. |
| Humidity | |
| Non-operating | 95% relative humidity (non-condensing) at 30 °C. |
| Shock | |
| Operating | 2.0 g, 11 msec, 1/2 sine |
| Packaged | Operational after a 18" free fall, although cosmetic damage may be present. |
| Acoustic noise | 50 dBA in a typical office ambient temperature (65-75 °F). Your selection of peripherals may change the noise level. |
| Electrostatic discharge (ESD) | Tested to 15 kilovolts (kV); no component damage. |

5 Regulatory Information

WARNING

You must adhere to the assembly instructions in this guide to ensure and maintain compliance with existing product regulations. Use only the described, regulated components specified in this guide. Use of other products / components will void the UL listing of the product, will most likely void other compliance markings provided, and may result in noncompliance with product regulations in the region(s) in which the product is sold.

Regulatory Compliance

The SC5100 chassis subassembly, when correctly integrated per this guide, complies with the following safety and electromagnetic compatibility (EMC) regulations.

Safety Compliance

- UL 1950 - CSA 950 (US/Canada)
- EN 60 950 (European Union)
- IEC60 950 (International)
- CE – Low Voltage Directive (73/23/EEC) (European Union)
- EMKO-TSE (74-SEC) 207/94 (Nordics)
- GOST-R 50377-92 (Russia)

EMC Compliance

- FCC (Class A) – Radiated & Conducted Emissions (USA)
- ICES-003 (Class A) – Radiated & Conducted Emissions (Canada)
- CISPR 22 (Class A) – Radiated & Conducted Emissions (International)
- EN55022 (Class A) – Radiated & Conducted Emissions (European Union)
- EN55024 (Immunity) (European Union)
- EN61000-3-2 – Harmonics (European Union)
- EN61000-3-3 – Voltage Flicker (European Union)
- CE – EMC Directive (89/336/EEC) (European Union)
- GOST-R 29216-91 / 50628-95 (Russia)
- VCCI (Class A) – Radiated & Conducted Emissions (Japan)
- AS/NZS 3548 (Class A) – Radiated & Conducted Emissions (Australia)
- RRL (Class A) Radiated & Conducted Emissions (Korea)
- BSMI (Class A) Radiated & Conducted Emissions (Taiwan)

Regulatory Compliance Markings

This product is provided with the following Product Certification Markings:

- UL & cUL Listing Mark
- CE Mark
- The CE marking on this product indicates that it is in compliance with the European community's EMC (89/336/EEC) and low voltage (73/23/EEC) directives
- NEMKO Mark
- German GS Mark
- Russian GOST Mark
- FCC, Class A Markings (Declaration of Conformity)
- ICES-003 (Canada EMC Compliance Marking)
- VCCI, Class A Mark
- Australian C-Tick Mark
- Taiwan BSMI Class A Markings

Electromagnetic Compatibility Notices

FCC Verification Statement (USA)

Product Type: SC5100

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Intel Corporation
5200 N.E. Elam Young Parkway
Hillsboro, OR 97124-6497
Phone: 1-800-628-8686

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on; the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. The customer is responsible for ensuring compliance of the modified product.

Only peripherals (computer input/output devices, terminals, printers, etc.) that comply with FCC Class A or B limits may be attached to this computer product. Operation with noncompliant peripherals is likely to result in interference to radio and TV reception.

All cables used to connect to peripherals must be shielded and grounded. Operation with cables, connected to peripherals that are not shielded and grounded may result in interference to radio and TV reception.

ICES-003 (Canada)

Cet appareil numérique respecte les limites bruits radioélectriques applicables aux appareils numériques de Classe A prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques", NMB-003 édictée par le Ministre Canadien des Communications.

(English translation of the notice above) This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Canadian Department of Communications.

Europe (CE Declaration of Conformity)

This product has been tested in accordance to, and complies with the Low Voltage Directive (73/23/EEC) and EMC Directive (89/336/EEC). The product has been marked with the CE Mark to illustrate its compliance.

VCCI (Japan)

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

English translation of the notice above:

This is a Class A product based on the standard of the Voluntary Control Council For Interference (VCCI) from Information Technology Equipment. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

BSMI (Taiwan)

The BSMI ID certification number 3902I912 and the following EMC warning are located on the outside rear area of the product.

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Lithium Battery Replacement



CAUTION

Refer to technically qualified persons only for replacement of battery.

The following warning is provided on the server board configuration label, which is provided with the Intel® server board boxed product. There is insufficient space on the server board to place this label. Therefore, the label must be placed permanently on the inside of the chassis, as close to the battery as possible.



WARNING

Danger of explosion if battery is incorrectly replaced. Replace with only the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.



ADVARSEL!

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.



ADVARSEL!

Lithiumbatteri - Eksplosjonsfare. Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten. Brukt batteri returneres apparatleverandøren.



VARNING

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.



VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

Equipment Rack Precautions



WARNINGS

ANCHOR THE EQUIPMENT RACK: The equipment rack must be anchored to an unmovable support to prevent it from falling over when one or more servers are extended in front of it on slide assemblies. The equipment rack must be installed according to the manufacturer's instructions. The anchors must be able to withstand a force of up to 113 kg (250 lbs.). You must also consider the weight of any other device installed in the rack.

MAIN AC POWER DISCONNECT: You are responsible for installing an AC power disconnect for the entire rack unit. This main disconnect must be readily accessible, and it must be labeled as controlling power to the entire unit, not just to the server(s).

GROUNDING THE RACK INSTALLATION: To avoid the potential for an electrical shock hazard, you must include a third wire safety grounding conductor with the rack installation. If server power cords are plugged into AC outlets that are part of the rack, then you must provide proper grounding for the rack itself. If server power cords are plugged into wall AC outlets, the safety grounding conductor in each power cord provides proper grounding only for the server. You must provide additional, proper grounding for the rack and other devices installed in it.

Overcurrent protection: The server is designed for an AC line voltage source with up to 20 amperes of overcurrent protection. If the power system for the equipment rack is installed on a branch circuit with more than 20 amperes of protection, you must provide supplemental protection for the server. If more than one server is installed in the rack, the power source for each server must be from a separate branch circuit. The overall current rating of a server configured with three power supplies is under 12 amperes.



CAUTIONS

Temperature: The operating temperature of the server, when installed in an equipment rack, must not go below 5 °C (41 °F) or rise above 35 °C (95 °F). Extreme fluctuations in temperature can cause a variety of problems in your server.

Ventilation: The equipment rack must provide sufficient airflow to the front of the server to maintain proper cooling. It must also include ventilation sufficient to exhaust a maximum of 4,100 Btu's per hour for the server. The rack selected and the ventilation provided must be suitable to the environment in which the server will be used.

Use Only for Intended Applications

This product was evaluated as Information Technology Equipment (ITE) that may be installed in offices, homes, schools, computer rooms and similar locations. The suitability of this product for other Product Categories and Environments other than ITE applications, (such as medical, industrial, alarm systems, and test equipment) may require further evaluation.

When you integrate this subassembly, observe all warnings and cautions in the Installation Guide.

To avoid injury, be careful of:

- Sharp pins on connectors
- Sharp pins on printed circuit assemblies
- Rough edges and sharp corners on the chassis
- Hot components (like processors, voltage regulators, and heat sinks)
- Damage to wires that could cause a short circuit



WARNING

Do not open the power supply. Risk of electric shock and burns from high voltage and rapid overheating. Refer servicing of the power supply to qualified technical personnel.

To maintain the UL listing and compliance to other regulatory certifications and/or declarations, the following regulated components must be used, and conditions adhered to. Information for configurations can be found on Intel's Server Builder Website at:

<http://channel.intel.com/go/serverbuilder>

If you do not have access to Intel's web address please contact your local Intel representative.

- **SC5100 chassis**—(chassis is provided with power supply and fans)—UL listed.
- **Add-in boards**—must have a printed wiring board flammability rating of minimum UL94V-1. Add-in boards containing external power connectors and/or lithium batteries must be UL Recognized or UL Listed. Add-in boards containing modem telecommunication circuitry must be UL Listed.
- **Peripheral storage devices**—must be UL Recognized or UL Listed accessory and TUV or VDE licensed. Maximum capacity for this chassis is 10 devices; maximum of any one device is 19W. Total server configuration is not to exceed maximum loading conditions of power supply.
 - When using a UL Recognized Peripheral Storage Device, the plastic bezel must be made of a UL Recognized plastic with a flammability rating of UL94V-1.

A Equipment Log and Worksheets

Equipment Log

Use the blank equipment log provided here to record information about your server. You will need some of this information when you run the SSU.

| Item | Manufacturer Name and Model Number | Serial Number | Date Installed |
|-----------------------------|------------------------------------|---------------|----------------|
| Chassis | | | |
| Server Board | | | |
| Processor Speed and Cache | | | |
| Memory | | | |
| Video Display | | | |
| Keyboard | | | |
| Mouse | | | |
| Diskette Drive A | | | |
| CD-ROM Drive | | | |
| Additional 5.25" Peripheral | | | |
| Hard Disk Drive | | | |
| Hard Disk Drive | | | |
| Hard Disk Drive | | | |
| Hard Disk Drive | | | |
| Hard Disk Drive | | | |
| Hard Disk Drive | | | |
| Hard Disk Drive | | | |

continued

Current Usage

Calculating Power Usage

The total combined wattage for your configuration **must be less than the wattage rating for your power supply**. Use the two worksheets in this section to calculate the total used by your configuration. For current and voltage requirements of add-in boards and peripherals, see your vendor documents.

Worksheet, Calculating DC Power Usage

Table 8. Power Usage Worksheet 1

| Device | Current (maximum) at voltage level: | | | | | |
|---------------------------------------|-------------------------------------|------|------|-------|-------|------------|
| | +3.3 V | +5 V | -5 V | +12 V | -12 V | 5V standby |
| Baseboard, Front Panel board and Fans | | | | | | |
| Processor(s) | | | | | | |
| Memory | | | | | | |
| 3.5-inch diskette drive | | | | | | |
| CD-ROM drive | | | | | | |
| Second 5.25-inch device | | | | | | |
| Third 5.25-inch device | | | | | | |
| 1st hard drive | | | | | | |
| 2nd hard drive | | | | | | |
| 3rd hard drive | | | | | | |
| 4th hard drive | | | | | | |
| 5th hard drive | | | | | | |
| 6th hard drive | | | | | | |
| SCSI Backplane | | 1.3 | | | | |
| Expansion Board 1 | | | | | | |
| Expansion Board 2 | | | | | | |
| Expansion Board 3 | | | | | | |
| Expansion Board 4 | | | | | | |
| Expansion Board 5 | | | | | | |
| Expansion Board 6 | | | | | | |
| Expansion Board 7 | | | | | | |
| Total Current | | | | | | |

Worksheet, Total Combined Power Used by the Server

1. From the previous worksheet, enter the total current for each column.
2. Multiply the voltage by the total current to get the total wattage for each voltage level.
3. Add the total wattage for each voltage level to arrive at the total combined power usage for the power subsystem.

Table 9. Power Usage Worksheet 2

| Voltage level and total current (V X A = W) | Total Watts for each voltage level |
|--|---|
| (+3.3 V) X (_____ A) | _____ W |
| (+5 V) X (_____ A) | _____ W |
| (-5 V) X (_____ A) | _____ W |
| (+12 V) X (_____ A) | _____ W |
| (-12 V) X (_____ A) | _____ W |
| (5 V standby) X (_____ A) | _____ W |
| Total Combined Wattage | _____ W |



CAUTION

As an overall current usage limitation on the power subsystem, do not exceed the specified combined power output for the +5 V and +3.3 V outputs. Exceeding this will overload the power subsystem and may cause the power supplies to overheat and malfunction.

- 300 watt: Do not exceed a combined power output of 220 watts for the +5 V and +3.3 V outputs
- 350 watt: Do not exceed a combined power output of 150 watts for the +5 V and +3.3 V outputs
- 550 watt: Do not exceed a combined power output of 140 watts for the +5 V and +3.3 V outputs
- 650 watt: Do not exceed a combined power output of 285 watts for the +5 V and +3.3 V outputs

B Warnings

WARNING: English (US)


AVERTISSEMENT: Français

WARNUNG: Deutsch


AVVERTENZA: Italiano

ADVERTENCIAS: Español


WARNING: English (US)

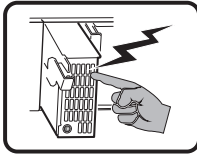

The power supply in this product contains no user-serviceable parts. There may be more than one supply in this product. Refer servicing only to qualified personnel.

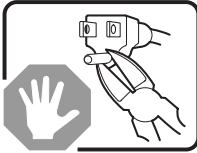

Do not attempt to modify or use the supplied AC power cord if it is not the exact type required. A product with more than one power supply will have a separate AC power cord for each supply.

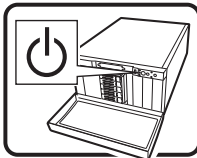


The power button on the system does not turn off system AC power. To remove AC power from the system, you must unplug each AC power cord from the wall outlet or power supply.

The power cord(s) is considered the disconnect device to the mains (AC) power. The socket outlet that the system plugs into shall be installed near the equipment and shall be easily accessible.




SAFETY STEPS: Whenever you remove the chassis covers to access the inside of the system, follow these steps:

1. Turn off all peripheral devices connected to the system.
2. Turn off the system by pressing the power button.
3. Unplug all AC power cords from the system or from wall outlets.
4. Label and disconnect all cables connected to I/O connectors or ports on the back of the system.
5. Provide some electrostatic discharge (ESD) protection by wearing an antistatic wrist strap attached to chassis ground of the system—any unpainted metal surface—when handling components.
6. Do not operate the system with the chassis covers removed.

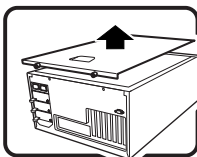

After you have completed the six SAFETY steps above, you can remove the system covers. To do this:

1. Unlock and remove the padlock from the back of the system if a padlock has been installed.
2. Remove and save all screws from the covers.
3. Remove the covers.

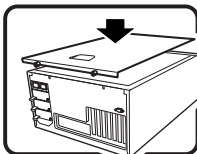


For proper cooling and airflow, always reinstall the chassis covers before turning on the system. Operating the system without the covers in place can damage system parts. To install the covers:


1. Check first to make sure you have not left loose tools or parts inside the system.
 2. Check that cables, add-in boards, and other components are properly installed.
 3. Attach the covers to the chassis with the screws removed earlier, and tighten them firmly.
 4. Insert and lock the padlock to the system to prevent unauthorized access inside the system.
 5. Connect all external cables and the AC power cord(s) to the system.
-

continued


WARNING: English (continued)

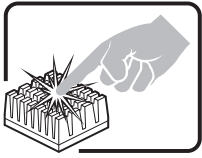

A microprocessor and heat sink may be hot if the system has been running. Also, there may be sharp pins and edges on some board and chassis parts. Contact should be made with care. Consider wearing protective gloves.

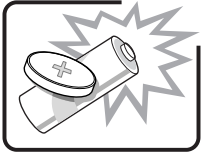


Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Dispose of used batteries according to manufacturer's instructions.

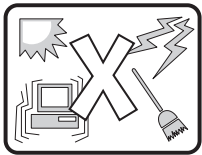


The system is designed to operate in a typical office environment. Choose a site that is:

- Clean and free of airborne particles (other than normal room dust).
 - Well ventilated and away from sources of heat including direct sunlight.
 - Away from sources of vibration or physical shock.
 - Isolated from strong electromagnetic fields produced by electrical devices.
 - In regions that are susceptible to electrical storms, we recommend you plug your system into a surge suppresser and disconnect telecommunication lines to your modem during an electrical storm.
 - Provided with a properly grounded wall outlet.
 - Provided with sufficient space to access the power supply cords, because they serve as the product's main power disconnect.
-


AVERTISSEMENT: Français

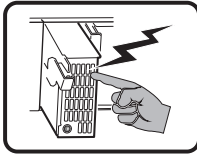

Le bloc d'alimentation de ce produit ne contient aucune pièce pouvant être réparée par l'utilisateur. Ce produit peut contenir plus d'un bloc d'alimentation. Veuillez contacter un technicien qualifié en cas de problème.

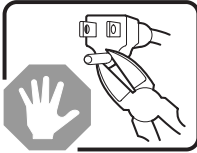

Ne pas essayer d'utiliser ni modifier le câble d'alimentation CA fourni, s'il ne correspond pas exactement au type requis. Le nombre de câbles d'alimentation CA fournis correspond au nombre de blocs d'alimentation du produit.

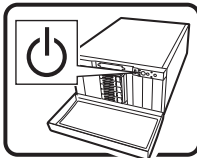


Notez que le commutateur CC de mise sous tension /hors tension du panneau avant n'éteint pas l'alimentation CA du système. Pour mettre le système hors tension, vous devez débrancher chaque câble d'alimentation de sa prise.




CONSIGNES DE SÉCURITÉ - Lorsque vous ouvrez le boîtier pour accéder à l'intérieur du système, suivez les consignes suivantes :

1. Mettez hors tension tous les périphériques connectés au système.
2. Mettez le système hors tension en mettant l'interrupteur général en position OFF (bouton-poussoir).
3. Débranchez tous les cordons d'alimentation c.a. du système et des prises murales.
4. Identifiez et débranchez tous les câbles reliés aux connecteurs d'E-S ou aux accès derrière le système.
5. Pour prévenir les décharges électrostatiques lorsque vous touchez aux composants, portez une bande antistatique pour poignet et reliez-la à la masse du système (toute surface métallique non peinte du boîtier).
6. Ne faites pas fonctionner le système tandis que le boîtier est ouvert.

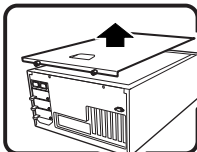

Une fois TOUTES les étapes précédentes accomplies, vous pouvez retirer les panneaux du système. Procédez comme suit :

1. Si un cadenas a été installé sur à l'arrière du système, déverrouillez-le et retirez-le.
2. Retirez toutes les vis des panneaux et mettez-les dans un endroit sûr.
3. Retirez les panneaux.

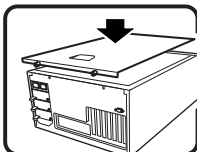


Afin de permettre le refroidissement et l'aération du système, réinstallez toujours les panneaux du boîtier avant de mettre le système sous tension. Le fonctionnement du système en l'absence des panneaux risque d'endommager ses pièces. Pour installer les panneaux, procédez comme suit :


1. Assurez-vous de ne pas avoir oublié d'outils ou de pièces démontées dans le système.
2. Assurez-vous que les câbles, les cartes d'extension et les autres composants sont bien installés.
3. Revissez solidement les panneaux du boîtier avec les vis retirées plus tôt.
4. Remettez le cadenas en place et verrouillez-le afin de prévenir tout accès non autorisé à l'intérieur du système.
5. Rebranchez tous les cordons d'alimentation c. a. et câbles externes au système.

suite


AVERTISSEMENT: Français (suite)

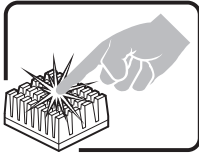

Le microprocesseur et le dissipateur de chaleur peuvent être chauds si le système a été sous tension. Faites également attention aux broches aiguës des cartes et aux bords tranchants du capot. Nous vous recommandons l'usage de gants de protection.

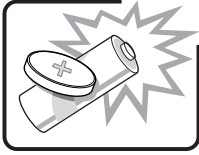


Danger d'explosion si la batterie n'est pas remontée correctement. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le fabricant. Disposez des piles usées selon les instructions du fabricant.

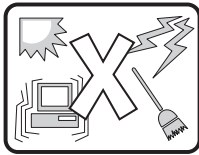


Le système a été conçu pour fonctionner dans un cadre de travail normal. L'emplacement choisi doit être :

- Propre et dépourvu de poussière en suspension (sauf la poussière normale).
 - Bien aéré et loin des sources de chaleur, y compris du soleil direct.
 - A l'abri des chocs et des sources de vibrations.
 - Isolé de forts champs électromagnétiques générés par des appareils électriques.
 - Dans les régions sujettes aux orages magnétiques il est recommandé de brancher votre système à un supresseur de surtension, et de débrancher toutes les lignes de télécommunications de votre modem durant un orage.
 - Muni d'une prise murale correctement mise à la terre.
 - Suffisamment spacieux pour vous permettre d'accéder aux câbles d'alimentation (ceux-ci étant le seul moyen de mettre le système hors tension).
-


WARNUNG: Deutsch

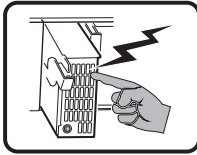

Benutzer können am Netzgerät dieses Produkts keine Reparaturen vornehmen. Das Produkt enthält möglicherweise mehrere Netzgeräte. Wartungsarbeiten müssen von qualifizierten Technikern ausgeführt werden.

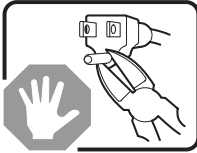

Versuchen Sie nicht, das mitgelieferte Netzkabel zu ändern oder zu verwenden, wenn es sich nicht genau um den erforderlichen Typ handelt. Ein Produkt mit mehreren Netzgeräten hat für jedes Netzgerät ein eigenes Netzkabel.

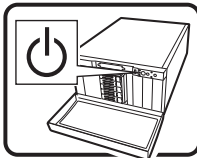


Der Wechselstrom des Systems wird durch den Ein-/Aus-Schalter für Gleichstrom nicht ausgeschaltet. Ziehen Sie jedes Wechselstrom-Netzkabel aus der Steckdose bzw. dem Netzgerät, um den Stromanschluß des Systems zu unterbrechen.




SICHERHEISSCHRIFFEN: Immer wenn Sie die Gehäuseabdeckung abnehmen um an das Systeminnere zu gelangen, sollten Sie folgende Schritte beachten:

1. Schalten Sie alle an Ihr System angeschlossenen Peripheriegeräte aus.
2. Schalten Sie das System mit dem Hauptschalter aus.
3. Ziehen Sie den Stromanschlußstecker Ihres Systems aus der Steckdose.
4. Auf der Rückseite des Systems beschrifteten und ziehen Sie alle Anschlußkabel von den I/O Anschlüssen oder Ports ab.
5. Tragen Sie ein geerdetes Antistatik Gelenkband, um elektrostatische Ladungen (ESD) über blanke Metallstellen bei der Handhabung der Komponenten zu vermeiden.
6. Schalten Sie das System niemals ohne ordnungsgemäß montiertes Gehäuse ein.

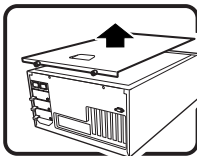

Nachdem Sie die oben erwähnten ersten sechs SICHERHEITSSCHRITTE durchgeführt haben, können Sie die Abdeckung abnehmen, indem Sie:

1. Öffnen und entfernen Sie die Verschlusseinrichtung (Padlock) auf der Rückseite des Systems, falls eine Verschlusseinrichtung installiert ist.
2. Entfernen Sie alle Schrauben der Gehäuseabdeckung.
3. Nehmen Sie die Abdeckung ab.

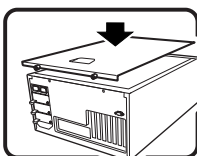


Zur ordnungsgemäßen Kühlung und Lüftung muß die Gehäuseabdeckung immer wieder vor dem Einschalten installiert werden. Ein Betrieb des Systems ohne angebrachte Abdeckung kann Ihrem System oder Teile darin beschädigen. Um die Abdeckung wieder anzubringen:


1. Vergewissern Sie sich, daß Sie keine Werkzeuge oder Teile im Innern des Systems zurückgelassen haben.
2. Überprüfen Sie alle Kabel, Zusatzkarten und andere Komponenten auf ordnungsgemäßen Sitz und Installation.
3. Bringen Sie die Abdeckungen wieder am Gehäuse an, indem Sie die zuvor gelösten Schrauben wieder anbringen. Ziehen Sie diese gut an.
4. Bringen Sie die Verschlusseinrichtung (Padlock) wieder an und schließen Sie diese, um ein unerlaubtes Öffnen des Systems zu verhindern.
5. Schließen Sie alle externen Kabel und den AC Stromanschlußstecker Ihres Systems wieder an.

Fortsetzung


WARNUNG: Deutsch (Fortsetzung)

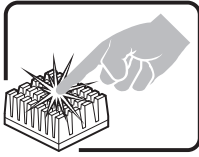

Der Mikroprozessor und der Kühler sind möglicherweise erhitzt, wenn das System in Betrieb ist. Außerdem können einige Platinen und Gehäuseteile scharfe Spitzen und Kanten aufweisen. Arbeiten an Platinen und Gehäuse sollten vorsichtig ausgeführt werden. Sie sollten Schutzhandschuhe tragen.

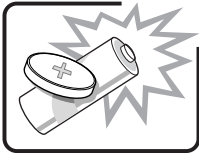


Bei falschem Einsetzen einer neuen Batterie besteht Explosionsgefahr. Die Batterie darf nur durch denselben oder einen entsprechenden, vom Hersteller empfohlenen Batterietyp ersetzt werden. Entsorgen Sie verbrauchte Batterien den Anweisungen des Herstellers entsprechend.

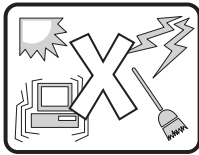


Das System wurde für den Betrieb in einer normalen Büroumgebung entwickelt. Der Standort sollte:

- sauber und staubfrei sein (Hausstaub ausgenommen);
 - gut gelüftet und keinen Heizquellen ausgesetzt sein (einschließlich direkter Sonneneinstrahlung);
 - keinen Erschütterungen ausgesetzt sein;
 - keine starken, von elektrischen Geräten erzeugten elektromagnetischen Felder aufweisen;
 - in Regionen, in denen elektrische Stürme auftreten, mit einem Überspannungsschutzgerät verbunden sein; während eines elektrischen Sturms sollte keine Verbindung der Telekommunikationsleitungen mit dem Modem bestehen;
 - mit einer geerdeten Wechselstromsteckdose ausgerüstet sein;
 - über ausreichend Platz verfügen, um Zugang zu den Netzkabeln zu gewährleisten, da der Stromanschluß des Produkts hauptsächlich über die Kabel unterbrochen wird.
-


AVVERTENZA: Italiano

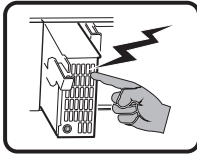

Rivolgersi ad un tecnico specializzato per la riparazione dei componenti dell'alimentazione di questo prodotto. È possibile che il prodotto disponga di più fonti di alimentazione.

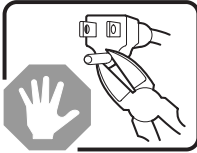

Non modificare o utilizzare il cavo di alimentazione in c.a. fornito dal produttore, se non corrisponde esattamente al tipo richiesto. Ad ogni fonte di alimentazione corrisponde un cavo di alimentazione in c.a. separato.

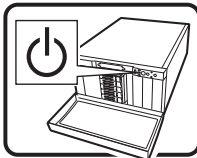


L'interruttore attivato/disattivato nel pannello anteriore non interrompe l'alimentazione in c.a. del sistema. Per interromperla, è necessario scollegare tutti i cavi di alimentazione in c.a. dalle prese a muro o dall'alimentazione di corrente.




PASSI DI SICUREZZA: Qualora si rimuovano le coperture del telaio per accedere all'interno del sistema, seguire i seguenti passi:

1. Spegner tutti i dispositivi periferici collegati al sistema.
2. Spegner il sistema, usando il pulsante spento/acceso dell'interruttore del sistema.
3. Togliere tutte le spine dei cavi del sistema dalle prese elettriche.
4. Identificare e sconnettere tutti i cavi attaccati ai collegamenti I/O od alle prese installate sul retro del sistema.
5. Qualora si tocchino i componenti, proteggersi dallo scarico elettrostatico (SES), portando un cinghia anti-statica da polso che è attaccata alla presa a terra del telaio del sistema – qualsiasi superficie non dipinta – .
6. Non far operare il sistema quando il telaio è senza le coperture.

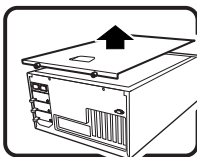

Dopo aver seguito i sei passi di SICUREZZA sopracitati, togliere le coperture del telaio del sistema come segue:

1. Aprire e rimuovere il lucchetto dal retro del sistema qualora ve ne fosse uno installato.
2. Togliere e mettere in un posto sicuro tutte le viti delle coperture.
3. Togliere le coperture.

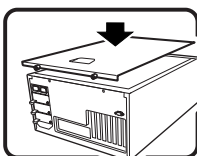


Per il giusto flusso dell'aria e raffreddamento del sistema, rimettere sempre le coperture del telaio prima di riaccendere il sistema. Operare il sistema senza le coperture al loro proprio posto potrebbe danneggiare i componenti del sistema. Per rimettere le coperture del telaio:


1. Controllare prima che non si siano lasciati degli attrezzi o dei componenti dentro il sistema.
2. Controllare che i cavi, dei supporti aggiuntivi ed altri componenti siano stati installati appropriatamente.
3. Attaccare le coperture al telaio con le viti tolte in precedenza e avvitarle strettamente.
4. Inserire e chiudere a chiave il lucchetto sul retro del sistema per impedire l'accesso non autorizzato al sistema.
5. Ricollegare tutti i cavi esterni e le prolunghe AC del sistema.

continua


AVVERTENZA: Italiano (continua)

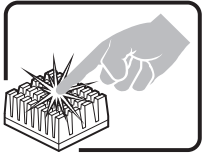

Se il sistema è stato a lungo in funzione, il microprocessore e il dissipatore di calore potrebbero essere surriscaldati. Fare attenzione alla presenza di piedini appuntiti e parti taglienti sulle schede e sul telaio. È consigliabile l'uso di guanti di protezione.

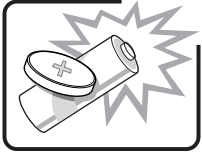


Esiste il pericolo di un'esplosione se la pila non viene sostituita in modo corretto. Utilizzare solo pile uguali o di tipo equivalente a quelle consigliate dal produttore. Per disfarsi delle pile usate, seguire le istruzioni del produttore.

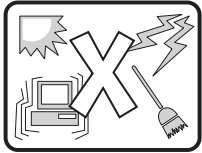


Il sistema è progettato per funzionare in un ambiente di lavoro tipo. Scegliere una postazione che sia:

- Pulita e libera da particelle in sospensione (a parte la normale polvere presente nell'ambiente).
 - Ben ventilata e lontana da fonti di calore, compresa la luce solare diretta.
 - Al riparo da urti e lontana da fonti di vibrazione.
 - Isolata dai forti campi magnetici prodotti da dispositivi elettrici.
 - In aree soggette a temporali, è consigliabile collegare il sistema ad un limitatore di corrente. In caso di temporali, scollegare le linee di comunicazione dal modem.
 - Dotata di una presa a muro correttamente installata.
 - Dotata di spazio sufficiente ad accedere ai cavi di alimentazione, i quali rappresentano il mezzo principale di scollegamento del sistema.
-

ADVERTENCIAS: Español

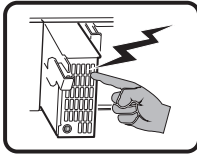


El usuario debe abstenerse de manipular los componentes de la fuente de alimentación de este producto, cuya reparación debe dejarse exclusivamente en manos de personal técnico especializado. Puede que este producto disponga de más de una fuente de alimentación.

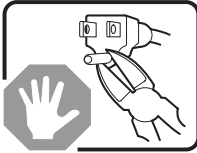

No intente modificar ni usar el cable de alimentación de corriente alterna, si no corresponde exactamente con el tipo requerido.

El número de cables suministrados se corresponden con el número de fuentes de alimentación de corriente alterna que tenga el producto.

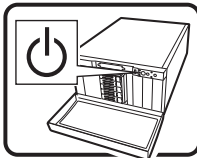


Nótese que el interruptor activado/desactivado en el panel frontal no desconecta la corriente alterna del sistema. Para desconectarla, deberá desenchufar todos los cables de corriente alterna de la pared o desconectar la fuente de alimentación.




INSTRUCCIONES DE SEGURIDAD: Cuando extraiga la tapa del chasis para acceder al interior del sistema, siga las siguientes instrucciones:

1. Apague todos los dispositivos periféricos conectados al sistema.
2. Apague el sistema presionando el interruptor encendido/apagado.
3. Desconecte todos los cables de alimentación CA del sistema o de las tomas de corriente alterna.
4. Identifique y desconecte todos los cables enchufados a los conectores E/S o a los puertos situados en la parte posterior del sistema.
5. Cuando manipule los componentes, es importante protegerse contra la descarga electrostática (ESD). Puede hacerlo si utiliza una muñequera antiestática sujeta a la toma de tierra del chasis — o a cualquier tipo de superficie de metal sin pintar.
6. No ponga en marcha el sistema si se han extraído las tapas del chasis.

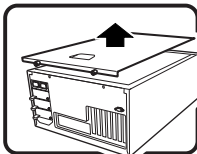

Después de completar las seis instrucciones de SEGURIDAD mencionadas, ya puede extraer las tapas del sistema. Para ello:

1. Desbloquee y extraiga el bloqueo de seguridad de la parte posterior del sistema, si se ha instalado uno.
2. Extraiga y guarde todos los tornillos de las tapas.
3. Extraiga las tapas.

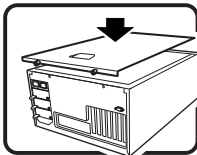


Para obtener un enfriamiento y un flujo de aire adecuados, reinstale siempre las tapas del chasis antes de poner en marcha el sistema. Si pone en funcionamiento el sistema sin las tapas bien colocadas puede dañar los componentes del sistema. Para instalar las tapas:


1. Asegúrese primero de no haber dejado herramientas o componentes sueltos dentro del sistema.
2. Compruebe que los cables, las placas adicionales y otros componentes se hayan instalado correctamente.
3. Incorpore las tapas al chasis mediante los tornillos extraídos anteriormente, tensándolos firmemente.
4. Inserte el bloqueo de seguridad en el sistema y bloquéelo para impedir que pueda accederse al mismo sin autorización.
5. Conecte todos los cables externos y los cables de alimentación CA al sistema.

continúa


ADVERTENCIAS: Español (continúa)

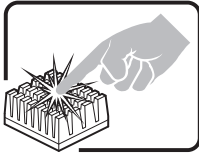

Si el sistema ha estado en funcionamiento, el microprocesador y el disipador de calor pueden estar aún calientes. También conviene tener en cuenta que en el chasis o en el tablero puede haber piezas cortantes o punzantes. Por ello, se recomienda precaución y el uso de guantes protectores.

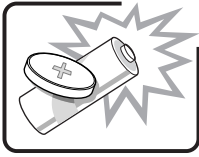

Existe peligro de explosión si la pila no se cambia de forma adecuada. Utilice solamente pilas iguales o del mismo tipo que las recomendadas por el fabricante del equipo. Para deshacerse de las pilas usadas, siga igualmente las instrucciones del fabricante.

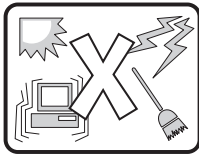

El sistema está diseñado para funcionar en un entorno de trabajo normal. Escoja un lugar:

- Limpio y libre de partículas en suspensión (salvo el polvo normal).
 - Bien ventilado y alejado de fuentes de calor, incluida la luz solar directa.
 - Alejado de fuentes de vibración.
 - Aislado de campos electromagnéticos fuertes producidos por dispositivos eléctricos.
 - En regiones con frecuentes tormentas eléctricas, se recomienda conectar su sistema a un eliminador de sobrevoltage y desconectar el módem de las líneas de telecomunicación durante las tormentas.
 - Provisto de una toma de tierra correctamente instalada.
 - Provisto de espacio suficiente como para acceder a los cables de alimentación, ya que éstos hacen de medio principal de desconexión del sistema.
-

C Warranty

Limited Warranty for Intel® Chassis Subassembly Products

Intel warrants that the Products (defined herein as the Intel® chassis subassembly and all of its various components and software delivered with or as part of the Products) to be delivered hereunder, if properly used and installed, will be free from defects in material and workmanship and will substantially conform to Intel's publicly available specifications for a period of three (3) years after the date the Product was purchased from an Intel authorized distributor. Software of any kind delivered with or as part of products is expressly provided "as is" unless specifically provided for otherwise in any software license accompanying the software.

If any Product furnished by Intel which is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, Intel, at its option, will:

- **REPAIR** the Product by means of hardware and/or software; OR
- **REPLACE** the Product with another Product; OR
- **REFUND** the then-current value of the Product if Intel is unable to repair or replace the Product.

If such Product is defective, transportation charges for the return of Product to buyer within the USA will be paid by Intel. For all other locations, the warranty excludes all costs of shipping, customs clearance, and other related charges. Intel will have a reasonable time to make repairs or to replace Product or to refund the then-current value of the Product.

In no event will Intel be liable for any other costs associated with the replacement or repair of Product, including labor, installation or other costs incurred by buyer.

This Limited Warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the Product.

Extent of Limited Warranty

Intel does not warrant that Products to be delivered hereunder, whether delivered stand-alone or integrated with other Products, including without limitation semiconductor components, will be free from design defects or errors known as "errata". Current characterized errata are available upon request.

This Limited Warranty does not cover damages due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing.

Warranty Limitations and Exclusions

These warranties replace all other warranties, expressed or implied including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Intel makes no expressed warranties beyond those stated here. Intel disclaims all other warranties, expressed or implied including, without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties, so this limitation may not apply.

All expressed and implied warranties are limited in duration to the limited warranty period. No warranties apply after that period. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Limitations of Liability

Intel's responsibility under this, or any other warranty, implied or expressed, is limited to repair, replacement or refund, as set forth above. These remedies are the sole and exclusive remedies for any breach of warranty. Intel is not responsible for direct, special, incidental, or consequential damages resulting from any breach of warranty under another legal theory including, but not limited to, lost profits, downtime, goodwill, damage to or replacement of equipment and property, and any costs of recovering, reprogramming, or reproducing any program or data stored in or used with a system containing this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may also have other rights that vary from jurisdiction to jurisdiction.

Any and all disputes arising under or related to this Limited Warranty shall be adjudicated in the following forums and governed by the following laws: for the United States of America, Canada, North America and South America, the forum shall be Santa Clara, California, USA and the applicable law shall be that of the State of California, USA; for the Asia Pacific region, the forum shall be Singapore and the applicable law shall be that of Singapore; for Europe and the rest of the world, the forum shall be London and the applicable law shall be that of the United Kingdom.

In the event of any conflict between the English language version and any other translated version(s) of this Limited Warranty, the English language version shall control.

How to Obtain Warranty Service

To obtain warranty service for this Product, you may contact Intel or your authorized distributor.

North America—Call Intel at 1-800-628-8686 during the warranty period during normal business hours (Pacific Time), excluding holidays. Please be prepared to provide: (1) your name, address, and telephone numbers; (2) model name and serial number of the Product; (3) an explanation of the problem. The customer service representative may need additional information from you depending on the nature of the problem.

In Europe, Asia, or South America—Contact your original authorized distributor for warranty service.

Any replacement Product is warranted under this written warranty and is subject to the same limitations and exclusions for the remainder of the original warranty period.

Telephone Support

All calls are billed US \$25.00 per incident, levied in local currency at the applicable credit card exchange rate plus applicable taxes.

| | | | |
|-------------------------------|--------------------|----------------------------------|---|
| In U.S. and Canada | | 1-800-404-2284 | |
| In Europe | | | |
| UK | 0870 6072439 | Finland | 9 693 79297 |
| France | 01 41 918529 | Denmark | 38 487077 |
| Germany | 069 9509 6099 | Norway | 23 1620 50 |
| Italy | 02 696 33276 | Sweden | 08 445 1251 |
| Spain | 91 377 8166 | Holland | 020 487 4562 |
| In Asia-Pacific region | | | |
| Australia | 1800 649931 | Indonesian | 001-803 65 7249 |
| Hong Kong | 852 2 844 4456 | Malaysia | 1-800 80 1390 |
| Korea | 822 767 2595 | New Zealand | 0800 444 365 |
| PRC | 800 820 1100 | Pakistan | 632 6368415 |
| Singapore | 65 831-1311 | Philippines | 1-800 1 651 0117 |
| Taiwan | 2 2718 9915 | Thailand | 001-800 6310003 |
| India | 0006517-2-830 3634 | Vietnam | 632 6368416 |
| In Japan | | | |
| 0120-868686 (Domestic) | | 81-298-47-0800 (outside country) | |
| In Latin America | | | |
| Brazil | 0021-0811-408-5540 | Ecuador | 999-119, 800-628-8686 (via AT&T) |
| Mexico | 001-800-628-8686 | Guatemala | 99-99-190, 800-628-8686 (via AT&T) |
| Colombia | 980-9-122-118 | Venezuela | 800-11-120, 800-628-8686 (via AT&T) |
| Costa Rica | 0-800-011-0395 | Argentina | 001-800-222-1001, 800-628-8686 (via AT&T) |
| Panama | 001-800-628-8686 | Paraguay | 008-11, 800-628-8686 (via AT&T) |
| Chile | 800-532-992 | Peru | 0-800-50000, 800-628-8686 (via AT&T) |
| Miami | 1-800-621-8423 | Uruguay | 000-410, 800-628-8686 (via AT&T) |

Returning a Defective Product

Before returning any product, call your authorized dealer/distribution authority. If the customer support group verifies that your product is defective, you will receive a Return Material Authorization (RMA) number to place on the outer package of the product. Intel can not accept any product without an RMA number on the package.